



BMR323

8:1 fixed ratio digital IBC (600 W)

BMR323 is a compact, unregulated and non-isolated intermediate bus converter (IBC). It is intended for applications in need of a low voltage IBC for improved system efficiencies. Typical use areas are Al and Cloud Computing applications.

BMR323 delivers a peak efficiency of 97.8% at half load. It offers a PMBus compatible digital interface, and is supported by the Flex Power Designer tool.

Up to 6 units can be used in parallel to supply an overall output power of up to 3600 W.









Key features

- 8:1 fixed ratio IBC
- Small form factor
- Parallelable up to 6 units
- Unregulated
- Non-isolated
- Peak efficiency 97.8%
- Digital interface with PMBus
- Meets safety requirements per IEC/EN/UL 62368-1

Soldering methods

• Pb Free SMD reflow

Key electrical information

Parameter	Values
Input range	40 - 60 V
Output voltage	5 - 7.5 V
Continuous output current	90 A at 54 V _{in}
Continuous output power	600 W
Peak power	1200 W

Mechanical

27.0 x 18.0 x 6.7 mm / 1.06 x 0.71 x 0.26 in

Application areas

• Designed for Artificial Intelligence (AI) applications



Product options

The table below describes the different product options.

Example:	BMR323	1	0	00	/001	С	Definitions
Product family	BMR323						
Pin length options		1					1 = SMD
Baseplate / HS option			0				0 = No baseplate
Other hardware options				00			00 = Standard variant
Configuration code					/001		/001 = PMBus base address 0x6n Note, see resistor table in PMBus addressing section of the Design & Application Guidelines.
Packaging options						С	C = Tape on Reel

For more information, please refer to Part 3 Mechanical information.

If you do not find the variant you are looking for, please contact us at Flex Power Modules .

Order number examples

Part number	Vin	Output	Configuration
BMR3231000/001C	40-60 V	5-7.5 V / 90 A / 600 W	No base plate / standard variant / antistatic tape and reel package



Absolute maximum ratings

Stress in excess of our defined absolute maximum ratings may cause permanent damage to the converter. Absolute maximum ratings, also referred to as non-destructive limits, are normally tested with one parameter at a time exceeding the limits in the electrical specification.

Characteristics	min	max	unit
Operating temperature (T _{P1})	-40	125	°C
Storage temperature	-55	125	°C
Input voltage (Vin)	-0.3	64	V
5V Vcc	-0.3	5.5	V
EN, PG, ALERT, ADDR, SCL, SDA	-0.3	3.6	V


Reliability

Failure rate (λ) and mean time between failures (MTBF= 1/ λ) are calculated based on *Telcordia SR-332* Issue 4: Method 1, Case 3, (80% of I_{OUt_TDP} , T_{P1} = 40°C, Airflow = 200 LFM).

Typical application diagram

	Mean	90% confidence level	Unit
Steady-state failure rate (λ)	134	163	nfailures/h
Standard deviation (σ)	22.6		nfailures/h
MTBF	7.49	6.15	MHr

Capacitor values are defined in the Electrical Specification tables. The EMI filter is defined in the EMC Part 2.

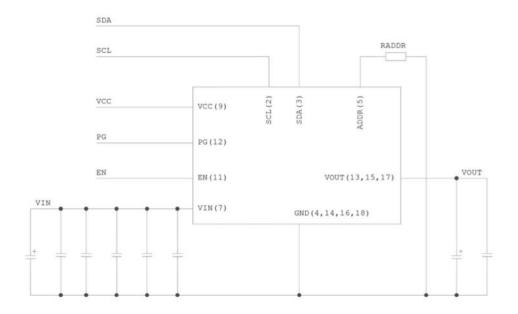



Electrical specifications for BMR3231000/001

6.75 V, 90 A (175A peak) / 600 W (1200 W peak)

Min and Max values are valid for: T_{P1} = -30 to + 95°C, V_{in} = 40 to 60 V, unless otherwise specified under conditions. Typical values given at: T_{P1} = +25°C, V_{in} = 54 V, max P_{out_TDP} , unless otherwise specified under conditions, see Note 1.

Additional external C_{in} = 470 μ F, C_{out} = 2x470 μ F

Characteristic	conditions	minimum	typical	maximum	unit			
Key features	Key features							
	50% of Pout_TDP		97.8		%			
	100% of P _{out_TDP}		97.0		%			
Efficiency (ŋ)	50% of P _{out_TDP} V _{in} = 40V		97.2		%			
	100% of Pout_TDP Vin = 40V		96.1		%			
P _{out_TDP} thermal design power (TDP)	See Note 1			600	W			
P _{out_MAX} peak power	See Note 1			1200	W			
Power dissipation	100 % of Pout_TDP		18.7		W			
Switching frequency (fs)	0-100 % of P _{out_TDP}		600		kHz			
Recommended capacitive load				5000	μF			
Input characteristics								
Input voltage range (V _{in})		40	54	60	V			
Input idling power	P _{out} = 0 W		3.3		W			
Input standby power	(turned off with EN)		91		mW			
Input OVP			64		V			
Internal input capacitance			28.2		μF			
Recommended external input capacitance	See Note 2		470		μF			

Note 1: Max. output current is rated at 200A at 40Vin. Max power is \leq 1000W and continuous power (thermal design power TDP) is \leq 600W depending on thermal conditions.

Note 2: Typical value (recommended) is 470 μ F + 5*2.2 μ F



Electrical specifications for BMR3231000/001

6.75 V, 90 A (175A peak) / 600 W (1200 W peak)

Min and Max values are valid for: T_{P1} = -30 to + 95°C, V_{in} = 40 to 60 V, unless otherwise specified under conditions. Typical values given at: T_{P1} = +25°C, V_{in} = 54 V, max P_{out_TDP} , unless otherwise specified under conditions, see Note 1.

Additional external C_{in} = 470 μ F, C_{out} = 2x470 μ F

Characteristic	conditions	minimum	typical	maximum	unit
Output characteristics		'		'	
Output voltage	P _{out} = 0 W	5.00	6.75	7.50	V
Output voltage	Disabled, no load		3		mV
Output current (Iout)	V _{in} = 40- 60 V, PG asserted	0	90	135	А
Max start-up load	Before PG			0	А
Output voltage droop	lout step from 0 to 90 A		200		mV
Output ripple & noise	20 MHz BW, see Note 1		22		mV _{p-p}
Internal output capacitance	V _{out} = 0V		250		μF
On/off control				·	
Turn-off input voltage	Decreasing input voltage		35		V
Turn-on input voltage	Increasing input voltage		37		V
On Delay Time	From EN asserted to ramp start		1.7		ms
Ramp-up time	From 10% to 90% of V _{out} , I _{out} = 0 A		2.8		ms
Start-up time	From V _{in} > VIN_ON to PG		16		ms
Enable start-up time	FROM EN to PG		15		ms
Logic high: trigger level	EN pin, Voltage Rising	2.1			V
Logic low: trigger level	EN pin, Voltage Falling			1.9	V
Sink current	EN pin		10		mA

Note 1: See Technical Reference: Application and design considerations.



Electrical specifications for BMR3231000/001

6.75 V, 90 A (175A peak) / 600 W (1200 W peak)

Characteristic	conditions	minimum	typical	maximum	unit
Protection features					
Input Over Voltage fault limit (IOVP)	Latch		64		V
Output undervoltage fault limit (UVP)	Latch		2		٧
Output overvoltage fault limit (OVP)	Latch		8.25		V
Over temperature fault limit (OTP)	Latch		125		°C
Over temperature warning limit (OTW)			90		°C
Over Current Protection (OCP)	Fast applicable on pulses, shorter than 5 ms.	200	230	250	Α
	Average, Note 1	150	155	200	Α
	IUVP, IOVP, UVP, OVP, OTP		2		μs
Response times	Fast OCP, 77-160 A		17		ms
	Average OCP, 77A-140 A		170		ms
5.0 V Vcc Auxiliary power					
Voltage		4.5	5.0	5.5	V
Current			250	360	mA

Note 1: See Technical Reference: Application and design considerations. The threshold is compared against a moving average value of four samples with 0.25 ms sampling interval. In addition, up to 0.3 ms may pass after a fault is trigged before switching stops.



Electrical specifications for BMR3231000/001

6.75 V, 90 A (175A peak) / 600 W (1200 W peak)

Characteristic	conditions	minimum	typical	maximum	unit		
Monitoring & Control							
-	V _{in} ON	36.1	36.8	37.5	V		
UVLO _{VIN} - Under Voltage Lock-Out	Vin OFF	33.5	34.2	34.9	٧		
Power Good Delay Time	From V _{out} = 100 % to PG asserted		6.5		ms		
Decree Constitution to the	Low to high transition		4.8		٧		
Power Good Threshold	High to low transition, Note 1		4.5		٧		
V _{IL} - Logic input low	SCL, SDA			1.0	٧		
V _{IL} - Logic input high	SCL, SDA	2.3			٧		
V _{OL} - Logic output low	SDA, PG			400	mV		
I _{OL} - Logic output low sink current	SDA, PG			20	mA		
I _{LEAK} - Logic leakage current	SDA, SCL, PG	-5		5	μΑ		
C _{LPIN} - Logic input capacitance	SDA, SCL, EN		7		рF		
f _{SMB} - SMBus Operating frequency		100		400	kHz		
EN - Enable	See page 5 "On/Off control"						

In the table below all PMBus commands are written in capital letters.

 T_{P1} = -20 to + 95 °C, V_{in} = 40 to 60 V, unless otherwise specified under conditions.

Typical values given at: $T_{P1} = +25$ °C, $V_{in} = 54$ V, max P_{out_TDP} , unless otherwise specified under conditions

For more detailed information please refer to Technical Reference Document: PMBus commands. This product is supported by the <u>Flex Power Designer tool</u>.

Command	Conditions	minimum	typical	maximum	unit
Monitoring accuracy					
Input voltage READ_VIN			±1		%
Output voltage READ_VOUT			±1		%
Output current READ_IOUT	V _{in} = 54 V, I _{out} = 90 A		±5		%
Temperature READ_TEMPERATURE_1	T ≥ 25 °C		±1		°C


Note 1: Power Good is deasserted when the output voltage is disabled, regardless of the output voltage level.



Electrical graphs for BMR3231000/001

6.75 V, 90 A (175A peak) / 600 W (1200 W peak)

Efficiency

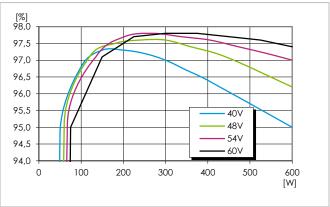

Efficiency vs. output power and input voltage at T_{P1} = +25°

Output Ripple and Noise

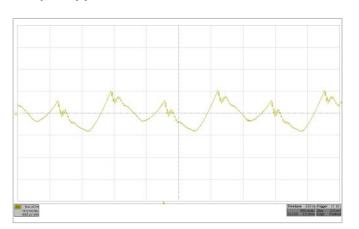



Figure 4: V_{in} = 54V , I_{out} = 90A, 20 MHz BW. Scale 10 mV/div, 500 ns/div

Startup



Figure 6: Output enabled by EN pin. $V_{in} = 54V$, $I_{out} = 0A$ Scale from top: 5, 5, 5 V/div, 5 ms/div.

Power dissipation

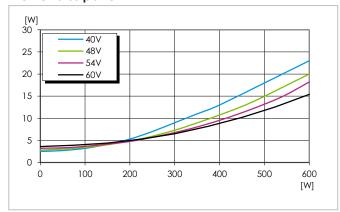

Dissipated power vs. load power at $T_{P1} = +25$ °C

Output voltage droop

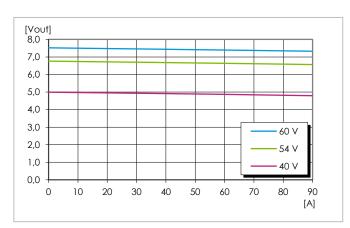


Figure 5: Output voltage vs output current

Shutdown

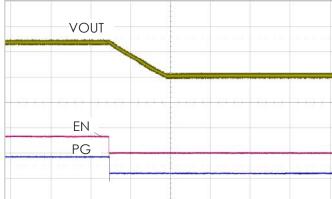


Figure 7: Output disabled by EN pin. $V_{in} = 54V$, $I_{out} = 1A$ Scale from top: 5, 5, 5 V/div, 5 ms/div.



Part 2: EMC

EMC specifications

Conducted EMI measured according to EN55022 / EN55032, CISPR 22 / CISPR 32 and FCC part 15J (see test set-up below). The fundamental switching frequency is 600 kHz for BMR323. The EMI characteristics below is measured at $V_{in} = 54V$ and max I_{out} .

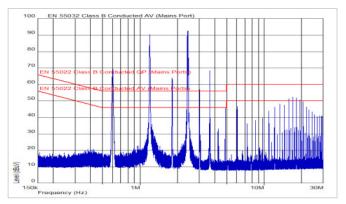


Figure 8: EMI without filter. (Blue graph = QP values)

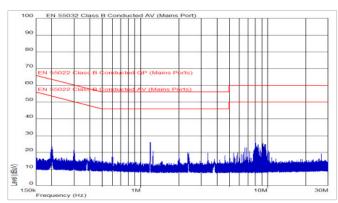


Figure 9: EMI with an optional external filter, EN55032. Test method and limits are the same as EN55022. (Blue graph = QP values)

Optional external filter for Class B

Suggested external input filter in order to meet Class B in EN 55022 / EN 55032, CISPR 22 / CISPR 32 and FCC part 15J.

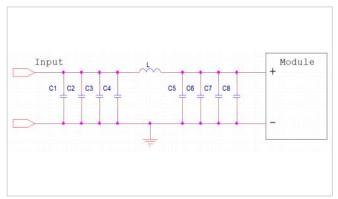


Figure 10: Filter components:

C1-C3, C6-C8 2.2uF 10% 1206 100V X7R, capacitor C4-C5 10uF 100VDC X7R 10%, capacitor L1 2.2uH 20% 26A DC, Inductor

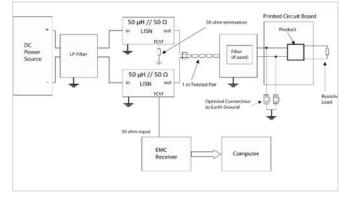



Figure 11: Test set-up


Layout recommendations


The radiated EMI performance of the product will depend on the PCB layout and ground layer design. It is also important to consider the stand-off of the product. If a ground layer is used, it should be connected to the output of the product and the equipment ground or chassis. A ground layer will increase the stray capacitance in the PCB and improve the high frequency EMC performance.



Part 3: Mechanical information BMR323 1000/xxx: surface mounted

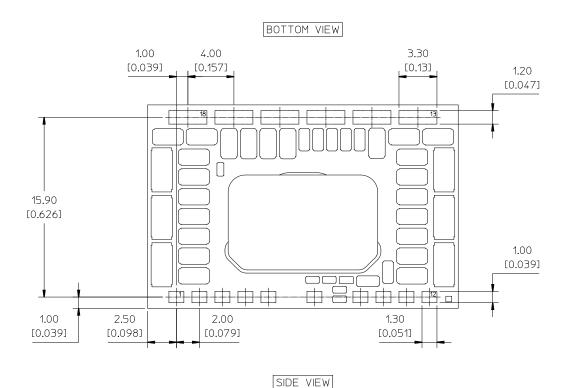

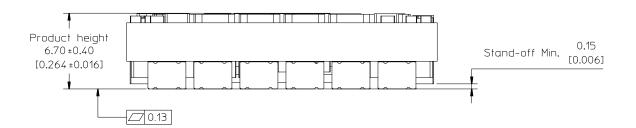

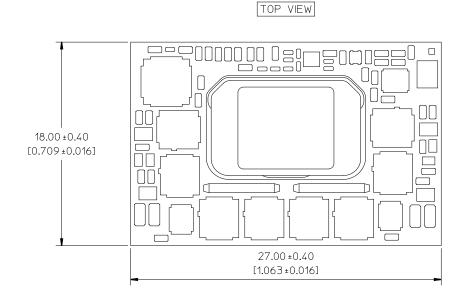

NOTES:

WEIGH I

Typical: 10.6 g

All dimensions in mm and [inch].
Tolerances unless specified:
x.x mm ±0.50 mm, [x.xx in. ±0.02 in.]
x.xx mm ±0.25 mm, [x.xxx in. ±0.010 in.]
(Not applied on footprint and typical values)

3D MODELS

3D .stp models are available on request.

All component placements, whether shown as physical components or symbolical outline, are for reference only and are subject to change throughout the product's life cycle unless explicitly described and dimensioned in this drawing.



Part 3: Mechanical information

TOP VIEW - Pin-out description and pin positions

RECOMMENDED PAD LAYOUT AND FOOTPRINT. TOP VIEW, THROUGH THE PRODUCT (0.118] 2.50 2.00 4.00 4.00 2.00 [0.079] (4x) 2.00 [0.079] (3x) ([0.098] [0.157] [0.157] 1.70 ... 0 [0.067] (10×) 1.60 [0.063] (10x) 15.90 19.00 18.00 MODULE OUTLINE [0.626] [0.709] [0.748] [0.142] (6x) 3.60 1.90 (6x) ____(5x) ______(5x) 3.50 1.60 1.10 ([0.063] [0.138] [0.043] 4.00 RECOMMENDED KEEP AWAY AREA ([0.157] FOR USER COMPONENTS PIN SPECIFICATION: 27.00 Material: [1.063] Copper alloy 28.00 Plating: [1.102] Min. Au 0.1µm over Ni 1-3µm

Pin	Designation	Туре	Function
1	NC		
2	SCL	Input/Output	PMBus clock
3	SDA	Input/Output	PMBus data
4	GND	Power	Power ground
5	ADDR	Input	PMBus address pin strap
6	Not mounted		
7	VIN	Power	Input voltage
8	Not mounted		
9	VCC	Power	Auxiliary supply
10	NC		
11	EN	Input	Enable, active high
12	PG	Open Drain	Power good, active high
13, 15, 17	VOUT	Power	Output voltage
14, 16, 18	GND	Power	Power ground




Thermal considerations

General

The product is designed with power switches on top to operate with top side cooling towards a heat sink or a cold plate. This is required to handle operation with high load. Cooling is also achieved by conduction to the host board and surrounding air. Sufficient cooling must be provided to ensure reliable operation. The Output Current Derating graph found in the Electrical Specification section provides the available output current versus case temperature and host board temperature.

Test Setup – Cold Plate

The product is tested in a box with two heater/coolers; one as a cold plate to control the temperature at the top of the product, another on the bottom side of the test board to control the host board temperature. The test board used is 130×160 mm in size with 1.6 mm thickness and 6 layers of 3 oz.

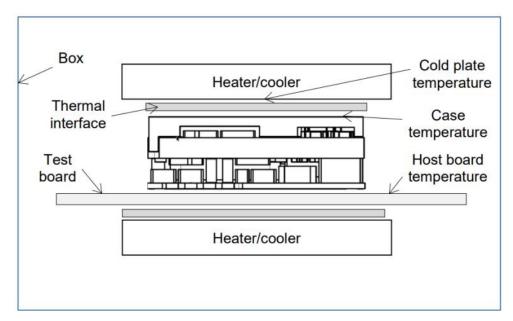

Test set-up: Cold plate




Test Setup – Heatsink


For products mounted on a PCB with a heatsink attached, cooling is achieved both by conduction, from the pins to the host board, and through the heatsink mounted on top of the device. The wind speed and temperature are measured in a point upstream to the device. The output current derating graphs found later in this section provide the available output current vs. ambient air temperature and air velocity at $V_{in} = 54 \text{ V}$.

For products using any form of heatsink structure a top spacing board and side airflow guides are used to ensure airflow hits the module and is not diverted away.

Distance between the tested device and the top space board and the side airflow guides are $6.35 \text{ mm} \pm 1 \text{ mm}$.

The product is tested on a 185 x 185 mm, 105 μ m (3 oz), 6-layer test board mounted vertically in a wind tunnel.

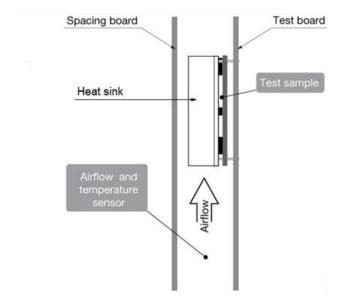

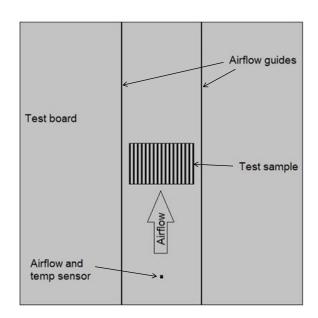




Definition of product operating temperature

Proper thermal conditions can be verified by measuring the temperature at position P1 as shown below. The temperature at this position (T_{P1}) should not exceed the maximum temperatures in the table below. The number of measurement points may vary with different thermal design and topology. Temperatures above maximum T_{P1}, measured at the reference point P1 are not allowed and may cause permanent damage.

Position	Description	Max. Temp.
P1	PCB Bottom	T _{P1} = 125 °C
	side	

BOTTOM VIEW

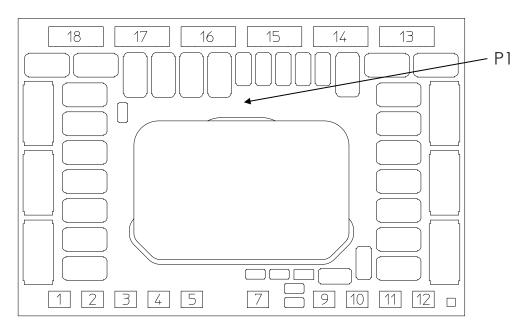



Thermal graphs

Output Power derating

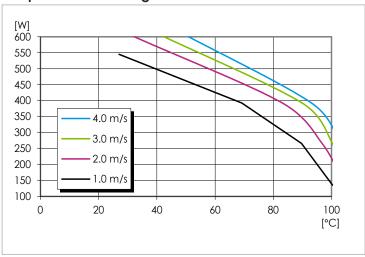


Figure 15: Max average output power vs. windspeed. Using ICK § 32 x 32 x 10 from Fischer.

Output Power derating

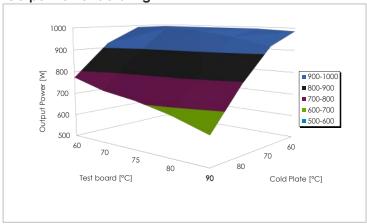


Figure 16: Max output power vs. cold plate temperature and host board temperature. Thermal interface material top 2.0 mm, 8 W/Mk, bottom 1.0 mm, 8 W/mK.

For more information, please refer to our <u>thermal models</u> on the website.



Peak Power

Peak power capability

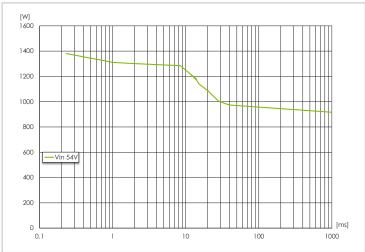



Figure 16: Max peak output current vs pulse duration and PMBus monitored temperature when pulse starts. Initial I_{out} = 90 A. Limit given by max internal junction temperature (150 °C) of hotspot component.



Part 5: Packaging Packaging information

The products are delivered in antistatic carrier tape (EIA 481 standard).

Carrier Tape Specifications		
Material	Antistatic PS	
Surface resistance	10 ⁷ < ohm/square	
Bakabilty	Tape cannot be baked	
Tape width, W	44 mm [1.73 inch]	
Pocket pitch, P1	32 mm [1.26 inch]	
Pocket depth, K0	8.9 mm [0.35 inch]	
Reel diameter	330 mm [13 inch]	
Reel capacity	150 products/reel	
Reel weight	2.2kg/full reel	

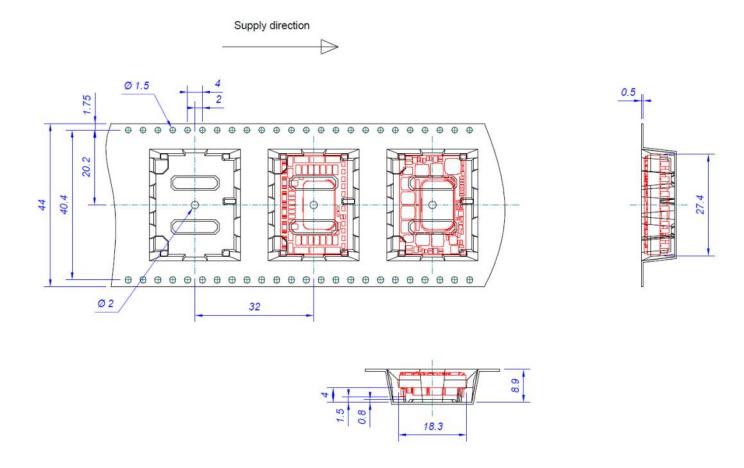



Part 6: Revision history Revision table

Revision number	revision change	date	revisor
Rev. A	First release.	2025-04-XX	Karmjoh
Rev. B	Updated picture of product.	2025-04-22	Karjnils
Rev. C	Fixing typo.	2025-04-23	Karjnils
Rev. D	Adding order number example on page 2.	2025-04-24	Karjnils
Rev. E	Added Liquid cooling thermal graphs and the Liquid Cooling Setup, pages 12, 13, 15.	2025-04-29	Karjlind



Flex Power Modules, a business line of Flex, is a leading manufacturer and solution provider of scalable DC/DC converter primarily serving the data processing, communications, industrial and transportation markets. Offering a wide range of both isolated and non-isolated solutions, its digitally-enabled DC/DC converters include PMBus compatibility supported by the powerful <u>Flex Power Designer</u>.













TECHNICAL REFERENCE DOCUMENT: DESIGN & APPLICATION GUIDELINES **Operating Information**

Input Voltage

The input voltage range 40 to 60 V (dc) meets the requirements for normal input voltage range in 54 V systems, 40V to 60 V.

Short duration transient disturbances can occur on the DC distribution and input of the product when a short circuit fault occurs on the equipment side of a protective device (fuse or circuit breaker). The voltage level, duration and energy of the disturbance are dependent on the particular DC distribution network characteristics and can be sufficient to damage the product unless measures are taken to suppress or absorb this energy. The transient voltage can be limited by capacitors and other energy absorbing devices like zener diodes connected across the positive and negative input conductors at strategic points in the distribution network. The end-user must secure that the transient voltage will not exceed the value stated in the Absolute maximum ratings.

Turn on and off input voltage

The product monitors the input voltage and will turn on and turn off at configured thresholds (see Electrical Specification). The turn-on input voltage threshold, defined by command VIN_ON (0x35), is set higher than the corresponding turn-off threshold, defined by command VIN_OFF (0x36). Hence, there is a hysteresis between turn-on and turn-off input voltage levels.

Input voltage transient

The end-user must secure that the transient voltage will not exceed the value stated in the Datasheet under Absolute maximum ratings of each product.

Input and Output Impedance

The impedance of both the input source and the load will interact with the impedance of the product. It is important that the input source has low characteristic impedance. The electrolytic capacitors will be degraded in low temperature. The needed input capacitance in low temperature should be equivalent to minimum recomended input and output capacitance at 20 °C. The performance in some applications can be enhanced by addition of external capacitance as described under External decoupling capacitors . If the input voltage source contains significant inductance, the addition of a low ESR ceramic capacitor of 22 – 100 µF capacitor across the input of the product will ensure stable operation. The minimum required capacitance value depends on the output power and the input voltage. The higher output power the higher input capacitance is needed.



External decoupling capacitors

When powering loads with significant dynamic current requirements, the voltage regulation at the point of load can be improved by addition of decoupling capacitors at the load.

The most effective technique is to locate low ESR ceramic and electrolytic capacitors as close to the load as possible, using several parallel capacitors to lower the effective ESR. The ceramic capacitors will handle high-frequency dynamic load changes while the electrolytic capacitors are used to handle low frequency dynamic load changes. It is equally important to use low resistance and low inductance PCB layouts and cabling.

Enabling Output Voltage


The output voltage is controlled by the EN pin and/or the PMBus command OPERATION, depending on the settings of the standard PMBus command ON_OFF_CONFIG. By default the output voltage is enabled by the EN pin using active high logic as default (OPERATION is ignored).

The EN pin in an open collector circuit without internal pull up or down resistor. The external resistor or control circuit must be able to pull EN pin voltage down below logic low threshold level (see Electrical Characteristics).

Soft-start

Once enabled, the output voltage will ramp up to a 8:1 ratio of the input voltage. The ramp up is controlled monotonic and performed in three steps:

- 1. FETs start switching at minimum Duty cycle and switching frequency and updated based on Vout/ Vin ratio with low energy transfer. The ramp is monitored to detect short circuits on the output.
- 2. The output voltage continues ramping up by increasing the switching frequency to nom.
- 3. Approaching the end of the soft start, the duty cycle is slowly increasing the duty cycle to nom.

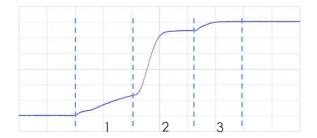

Ramp up waveform

Soft-stop can be disabled through the PMBus command ON_OFF_CONFIG (0x02).

The BMR 323 start-up sequence does not allow to load the module during startup. To fully load the BMR323 the contoller should have initiated a Power Good signal. The startup time is input voltage and output capacitor dependant, for the maximum allowed output capacitance (see Electrical Specification).

Note: The soft-start sequence can not be changed by the user.



Over temperature protection (OTP)

The product is protected from thermal overload by an internal over temperature shutdown function. The temperature sensor is located to provide a temperature representative of the module hot spot, see section Thermal Considerations in the datasheet.

The temperature is continuously monitored and when the temperature rises above the configured fault threshold level the product will respond as configured. The product can respond in several ways as follows:

- 1. Immediate shutdown of output voltage until the output voltage is re-enabled (latch). Defaul setting.
- 2. Ignore fault and continue operation. Not recomended.

The default OTP limit is specified in section Electrical Characteristics in the datasheet. The OTP fault and warning limits and response are configured using the PMBus commands OT_FAULT_LIMIT(0x4F), OT_WARN_LIMIT(0x51) and OT_FAULT_RESPONSE(0x50).

Input Voltage Protections (IUVP, IOVP)

The product monitors the input voltage continuously. If the output voltage is enabled, and the input voltage falls below or rises above the configured threshold levels (see Electrical Specification) the product will respond as configured. The response can be configured in different ways:

- 1. Immediate shutdown of output voltage until the output voltage is re-enabled (latch). Defaul setting.
- 2. Ignore fault and continue operation. Not recomended.

The limits and fault responses are configured using the PMBus commands: VIN_UV_WARN_LIMIT(0x58), VIN_UV_FAULT_LIMIT(0x59), VIN_UV_FAULT_RESPONSE(0x5A), VIN_OV_WARN_LIMIT(0x57), VIN_OV_FAULT_LIMIT(0x55), VIN_OV_FAULT_RESPONSE(0x56).

Output Voltage Protections (UVP, OVP)

The product includes functionality for under and over voltage warnings and protection of the output voltage. The product can be configured to respond in different ways when the UVP/OVP fault limit is passed:

- 1. Immediate shutdown of output voltage until the output voltage is re-enabled (latch). Defaul setting.
- 2. Ignore fault and continue operation. Not recomended.

The limits and fault responses are configured using the PMBus commands: VOUT_UV_WARN_LIMIT(0x43), VOUT_UV_FAULT_RESPONSE(0x45), VOUT_UV_FAULT_LIMIT(0x44), VOUT_OV_WARN_LIMIT(0x42), VOUT_OV_FAULT_RESPONSE(0x41), VOUT_OV_FAULT_LIMIT(0x40).

For more information, see Technical Reference Document: PMBus.

Pre-bias start-up

The product has a pre-bias start up functionality and will not sink current during start up if a pre-bias source is present at the output terminals. If the pre-bias voltage is lower than the target value, the product will ramp up to the target value.



Power supply sequencing and module enabling

The module should only be started using this defined sequences.

1. VCC, VIN and lastly EN.


It is vital that the time from where VCC is applied to when VIN/EN is activated is minimum 50ms. This timing is important in order to allow the controller to start the module.

Over current protection (OCP)

The product includes robust current limiting functionality for protection at overload at continous operation as well as transients over current protections. The over current protection and its fault response can be configured using Flex Power Designer software. For more information, see *Technical Reference Document: PMBus*.

The OCP functions can be divided into three parts.

- 1. Fast OCP, MFR_IOUT_OC_FAST_FAULT_LIMIT (0xD1).
- 2. OCP, IOUT_OC_FAULT_LIMIT (0x46).
- 3. A Moving Average, MFR_IOUT_AVG_OC_FAULT_LIMIT (0xD0), see figure below.

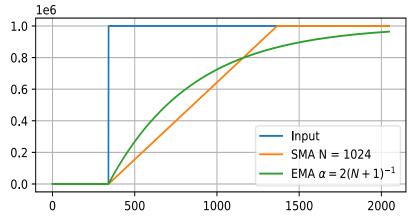

Demonstration of the behaviour of Simple Moving Average (SMA) and EMA for a step-function input



Short circuit protection

During soft start the output voltage ramp is continuously monitored to detect a short circuit on the output. If the output voltage is not rising as expected, switching will stop and raise Startup OC fault. When there is a short circuit during operation, the module is protected by Over Current Protection.

Power good

The power good pin (PG) indicates when the product is ready to provide output voltage to the load. After initialization, the PG pin is asserted low (open drain) until the output voltage is enabled and the soft-start procedure has finalized. The product also provides a power good flag in the STATUS_WORD command that indicates the output voltage is within a specified tolerance of its target level and no-fault condition exists.

By default, the PG pin is configured as open drain output, but it is also possible to set the output in push/pull mode by the command MFR_MULTI_PIN_CONFIG (0xF9). The polarity is by default configured to active high, the polarity of PG can be set to active low using the command FW_CONFIG_PMBUS (0xC9).

Note on PG pin:

It is not recommended to use push-pull when paralleling PG-pins.

Peak power considerations

The DC/DC converter has a peak power level warning in the datasheet. This in order to handle higher power than the thermal design power (TDP) for the converter. The Peak power level is also set in consideration of overshoot from a fast transient, tested from 0 to peak current with a specified di/dt. Thus a higher peak power, up to few standard OCP level, can be achieved but for a shorter period of time. Faster di/dt and higher peak load than specified, might cause current overshoot resulting in OCP fault.

For further assistance, contact your local Flex Power Modules' representative or email us to pm.info@flex.com

Switching frequency

The product is optimized at the frequency given in the *Datasheet* under part 1- Electrical Specification. The frequency can not be changed by the user. Please contact your local Flex Power Modules FAE for more details.

Multi pin configurations


The MFR_MULTI_PIN_CONFIG (0xF9) command can be re-configured using the PMBus interface to enable or disable different functions and set the pin configuration of the digital header.

For more information, see Technical Reference Document: PMBus.



Output ripple and noise

Output ripple and noise measured according to figure below using evaluation board ROA 170286. See Design Note 022 for detailed information

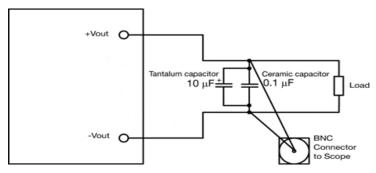

Output ripple and noise test setup

Non-Volatile Memory (NVM)

The product incorporates two Non-Volatile Memory areas for storage of the PMBus command values; the Default NVM and the User NVM. The Default NVM is pre-loaded with Flex factory default values. The Default NVM is write-protected and can be used to restore the Flex factory default values through the command RESTORE_DEFAULT_ALL (0x12).

The User NVM is pre-loaded with Flex factory default values. The User NVM is writable and open for customization. The values in NVM are loaded during initialization according to section Initialization Procedure, where after commands can be changed through the PMBus Interface.

The module contains a one-time programmable memory (OTP) used to store configuration settings, which will not be programmed into the device OTP automatically. The STORE_USER_ALL(0x15) commands must be used to commit the current settings are transferred from RAM to OTP as device defaults.

Note: The one-time programmable memory (OTP) has limited storing times, frequent use of STORE_USER_ALL command can lead to memory space exhaustion.

Parallel operation

Two or more products may be paralleled for redundancy. The products provide output voltage droop resistance in secondary transformer winding, which enables direct paralleling. To achieve optimum operation when paralleling modules, it is important to ensure the same PCB routing path resistances between the input terminals and merged output terminals. The output voltage will decrease with increased load current. This feature allows the product to be connected in parallel and share current within 10% accuracy at max output power. This means that up to 90% of max rated current from each module can be utilized.

In applications with several modules in parallel, the PG signal of all modules should be connected together. Further, load shall not be applied unless PG signal is high (= all modules have successfully ramped up).

For further information please contact your local Flex Power Modules' representative or email us at pm.info@flex.com.



Power management

PMBUS overview

This product is equipped with a PMBus interface. The product incorporates a wide range of readable and configurable power management features that are simple to implement with a minimum of external components. Additionally, the product includes protection features that continuously safeguard the load from damage due to unexpected system faults. The following product parameters can continuously be monitored by a host: Input voltage, output voltage/current and internal temperature.

The product is delivered with a default configuration suitable for a wide range operation in terms of input voltage, output voltage, and load. The configuration is stored in an internal Non-Volatile Memory (NVM). All power management functions can be reconfigured using the PMBus interface.

Throughout this document, different PMBus commands are referenced. The Flex Power Designer software suite can be used to configure and monitor this product via the PMBus interface. More information is found on <u>our website</u>.

SMBus interface

This product provides a PMBus digital interface that enables the user to configure many aspects of the device operation as well as to monitor the input and output voltages, output current and device temperature. The product can be used with any standard two-wire I²C (master must allow for clock stretching) or SMBus host device. In addition, the product is compatible with SMBus version 3.0 and includes an SALERT line to help mitigate bandwidth limitations related to continuous fault monitoring. The product supports 100 kHz and 400 kHz bus clock frequency only. The SMBus signals, SCL, SDA and SALERT require passive pull-up resistors as stated in the SMBus Specification. Pull-up resistors are required to guarantee the rise time as follows:

$$T = R_p C_p \le 1 \mu s$$

where R_p is the pull-up resistor value and C_p is the bus load. The maximum allowed bus load is 400 pF. The pull-up resistor should be tied to an external supply between 2.7 to 3.8 V, which should be present prior to or during power-up. If the proper power supply is not available, voltage dividers may be applied. Note that in this case, the resistance in the equation above corresponds to parallel connection of the resistors forming the voltage divider.

PEC (Packet Error Check) is not supported.



PMBus addressing

The following figure and table show recommended resistor values with min and max range for hard-wiring PMBus addresses (series E96, 1% tolerance resistor suggested).

The XADDR pin can be configured with a resistor to GND according to the following table.

Index.	1% RADDR [kΩ]	PMBus Address = 0x60 + Index
0	0	0x60
1	0.576	0x61
2	1.05	0x62
3	1.62	0x63
4	2.26	0x64
5	3.16	0x65
6	4.22	0x66
7	5.76	0x67
8	7.68	0x68
9	10.5	0x69
Α	14.3	0x6A
В	20	0x6B
С	28.4	0x6C
D	46.4	0x6D
Е	86.6	0x6E
F	205	0x6F

The PMBus address is calculated as:

PMBus Address = Base Address + Index

where the base address is defined by bits [31:24] in the PMBus command PMBUS_ADDRESS (0xC9). The standard default value for the base address is (0x60), giving an address range from (0x60) to (0x6F). Specific product variants may have a different default value.


If changing the base address, the change will take effect after the VCC voltage is cycled.



I2C/SMBus timing

The setup time, t_{set}, is the time data, SDA, must be stable before the rising edge of the clock signal, SCL. The hold time t_{hold}, is the time data, SDA, must be stable after the rising edge of the clock signal, SCL. If these times are violated incorrect data may be captured or meta-stability may occur and the bus communication may fail. All standard SMBus protocols must be followed, including clock stretching.

This product supports the BUSY flag in the status commands to indicate product being too busy for SMBus response. A bus-free time delay between every SMBus transmission (between every stop & start condition) must occur. Refer to the SMBus specification, for SMBus electrical and timing requirements.

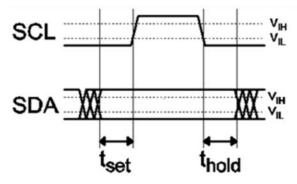

Set-up and hold timing diagram



Monitoring via PMBus

It is possible to continuously monitor a wide variety of parameters through the PMBus interface. These include, but are not limited to, the parameters listed in the table below.

Parameter	PMBus command
Input voltage	READ_VIN
Output voltage	READ_VOUT
Output current	READ_IOUT
Temperature	READ_TEMPERATURE_1

These PMBus commands are updated every 0.25 ms.

The temperature sensor is located to provide a temperature reading representative of the module hot spot P1, see section Thermal Considerations in the datasheet.

Monitoring faults

The user may read PMBus status commands to find out what fault or warning condition occurred, see table below:

Fault and warning status	PMBus command
Overview, Power Good	STATUS_BYTE STATUS_WORD
Output voltage level	STATUS _VOUT
Output current level	STATUS_IOUT
Input voltage level	STATUS_INPUT
Temperature level	STATUS_TEMPERATURE
PMBus communication	STATUS_CML
Miscellaneous	STATUS_MFR_SPECIFIC

Status bits are asserted until faults and/or warnings are cleared by the CLEAR_FAULTS (0x03) command. A re-enable of the output voltage will not clear the status bits.



General PMBus comand summary

PMBus signal interfaces characteristics

Characteristic	conditions	minimum	typical	maximum	unit
PMBus signal interface ch	naracteristics				
Input clock frequency drift tolerance	External sync.	-4		4	%
Initialization time	From $V_{cc} > 4.5 \text{ V}$ to ready to be enabled		30		ms
Output voltage total on	Enable by input voltage		T _{ONdel}		
delay time	Enable by RC or CTRL pin		T _{ONdel}		
Logic output low signal level	SDA, ALERT, PG			0.4	V
Logic output high signal level		2.7			V
Logic output low sink current	SDA, ALERT, PG			20	mA
Logic output high source current				4	mA
Logic input low threshold	SCL, SDA			1.0	V
Logic input high threshold		2.3			V
Logic pin input capacitance	SCL, SDA, EN		7		pF
Supported SMBus operating frequency		100		400	kHz
SMBus bus free time	STOP bit to START bit		1.3		μs
SMBus SDA setup time from SCL			100		μs
SMDBus SDA hold time from SCL			0		ns
SMBus START/STOP condition setup/hold time from SCL			600		ns
SCL low period		1.3			μs
SCL high period			0.6	50	μs



TECHNICAL REFERENCE DOCUMENT: GENERAL INFORMATION

Compatibility with RoHS requirements

The products are compatible with the relevant clauses and requirements of the *RoHS directive 2011/65/EU* and 2015/863 have a maximum concentration value of 0.1% by weight in homogeneous materials for lead, mercury, hexavalent chromium, PBB, PBDE, DEHP, BBP, DBP, DIBP and of 0.01% by weight in homogeneous materials for cadmium.

Exemptions in the RoHS directive utilized in Flex Power Modules products are found in the Statement of Compliance document.

Flex Power Modules fulfills and will continuously fulfill all its obligations under regulation (EC) No 1907/2006 concerning the registration, evaluation, authorization and restriction of chemicals (REACH) as they enter into force and is through product materials declarations preparing for the obligations to communicate information on substances in the products.

Quality statement

The products are designed and manufactured in an industrial environment where quality systems and methods like <u>ISO 9001</u>, <u>ISO 14001</u>, <u>ISO 45001</u>, Six *Sigma*, and *SPC* are intensively in use to boost the continuous improvements strategy. Infant mortality or early failures in the products are screened out and they are subjected to an ATE-based final test. Conservative design rules, design reviews and product qualifications, plus the high competence of an engaged workforce, contribute to the high quality of the products.

Warranty

Warranty period and conditions are defined in Flex Power Modules' General Terms and Conditions of Sales.

Limitation of Liability

Flex Power Modules does not make any other warranties, expressed or implied including any warranty of merchantability or fitness for a particular purpose (including, but not limited to, use in life support applications, where malfunctions of product can cause injury to a person's health or life).

2/28701-BMR323 REV A 2025-03-20



Product qualification specifications

Characteristics			
External visual inspection	IPC-A-610		
Temperature shock test (Temperature cycling)	IEC 60068-2-14 Na	Temperature range Number of cycles Dwell/transfer time	-40 to 125°C 700 15 min/0-1 min
Cold (in operation)	IEC 60068-2-1 Ad	Temperature T _A Duration	-45°C 72 h
Damp heat	IEC 60068-2-67 Cy	Temperature Humidity Duration	85°C 85% RH 1000 hours
Dry heat	IEC 60068-2-2 Bd	Temperature Duration	125°C 1000 h
Electrostatic discharge susceptibility	IEC 61340-3-1, JESD 22-A114 IEC 61340-3-2, JESD 22-A115	Human body model (HBM) Machine Model (MM)	Class 2, 2000 V Class 3, 200 V
Immersion in cleaning solvents	IEC 60068-2-45 XA, method 2	Water Flux Cleaner Isopropyl alcohol	55°C 23°C 35°C
Mechanical shock	IEC 60068-2-27 Ea	Peak acceleration Duration	100 g 6 ms
Moisture reflow sensitivity	J-STD-020E	Level 1 (SnPb-eutectic) Level 3 (Pb Free)	225°C 245°C
Operational Life test Rapid Temp.	MIL-STD-202G, method 108A	Duration	1000 h
Robustness of terminations	IEC 60068-2-21 Test Ue1	Surface mount products	All leads
Solderability	IEC 60068-2-20 test Ta	Preconditioning Temperature, Pb-free	Steam ageing 245°C
Vibration, broad band ran- dom	IEC 60068-2-64 Fh, method 1	Frequency Spectral density Duration	10 to 500 Hz 0.07 g ² /Hz 10 min in each direction

2/28701-BMR323 REV A 2025-03-20 2



TECHNICAL REFERENCE DOCUMENT: SOLDERING

Reflow soldering profile for surface mount

Products intended for surface mount assembly are qualified for use in a Pb-free forced convection or vapor phase reflow soldering process.


For Pb-free solder processes, a pin temperature (T_{pin}) in excess of the solder melting temperature (T_L , 217 to 221°C for SnAgCu solder alloys) for more than 60 seconds and a peak temperature of 245°C on all pins is recommended to ensure a reliable solder joint.

T_L is the typical solder melting (liquidous) temperature

T_{product} is measured on the power module's hotspot

T_{pin} is measured on the power module output power pins solder joints at the customer board

General reflow process specification		Pb-free, SAC305
Average ramp-up rate (T _{product})		3 °C/s max
Typical solder melting temp.	TL	217 ° C
Min/Max. reflow time above T _L	T _{pin}	60 –150 s
Min. pin temp.	T _{pin}	235 °C
Peak product temp.	Tproduct	245 °C
Average ramp-down (T _{product})		6°C/s max
Max. time 25° C to peak		8 minutes

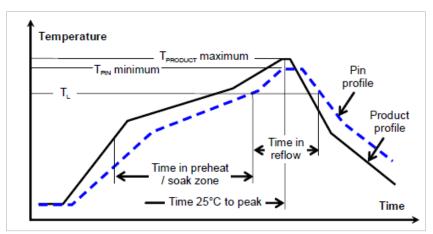

Typical soldering profile



Moisture reflow classification

For Pb-free reflow solder processes, the product is qualified for MSL 3 according to IPC/JEDEC standard J-STD-020C.

Dry pack information

Using products in high temperature reflow soldering processes requires dry pack storage and handling. Products intended for Pb-free reflow soldering processes are delivered in standard moisture barrier bags according to IPC/JEDEC standard J-STD-033 (handling, packing, shipping and use of moisture/reflow sensitivity surface mount devices). In case the products have been stored in an uncontrolled environment and no longer can be considered dry, floor life according to MSL 3, the modules must be baked according to J-STD-033.

Post solder cleaning

A no-clean flux is recommended to avoid entrapment of cleaning fluids in cavities inside the product or between the product and the host board, since cleaning residues may affect long term reliability and isolation voltage.

4/28701-BMR323 REV A 2025-03-20 2



TECHNICAL REFERENCE DOCUMENT: SAFETY

Safety specifications

Flex Power Modules' DC/DC converters and DC/DC regulators are designed in accordance with the safety standards IEC 62368-1, EN 62368-1 and UL 62368-1 Audio/video, information and communication technology equipment - Part 1: Safety requirements

IEC/EN/UL 62368-1 contains requirements to prevent injury or damage due to the following hazards:

- Electrical shock
- Electrically-caused fire
- Injury caused by hazardous substances
- Mechanically-caused injury
- Skin burn
- Radiation-caused injury

On-board DC/DC converters, Power Interface Modules and DC/DC regulators are defined as component power supplies. As components they cannot fully comply with the provisions of any safety requirements without "conditions of acceptability". Clearance between conductors and between conductive parts of the component power supply and conductors on the board in the final product must meet the applicable safety requirements. Certain conditions of acceptability apply for component power supplies with limited stand-off (please refer to the *Datasheet under Mechanical Information* for further information). It is the responsibility of the installer to ensure that the final product housing these components complies with the requirements of all applicable safety standards and regulations for the final product.

Component power supplies for general use shall comply with the requirements in *IEC/EN/UL* 62368-1. Product related standards, e.g. *IEEE* 802.3af Power over Ethernet, and ETS-300132-2 Power interface at the input to telecom equipment, operated by direct current (dc) are based on *IEC/EN/UL* 62368-1 with regards to safety.

All Flex Power Modules' DC/DC converters, Power Interface Modules and DC/DC regulators are UL 62368-1 recognized and certified in accordance with EN 62368-1. The flammability rating for all construction parts of the products meet requirements for V-0 class material according to IEC 60695 -11-10, Fire hazard testing, test flames – 50 W horizontal and vertical flame test methods.

5/28701-BMR323 Rev A 2025-03-25



Technical Reference PMBus - BMR 323 X000/001

This appendix contains a detailed reference of the PMBus commands supported by the product.

Data Formats

The products make use of a few standardized numerical formats, along with custom data formats. A detailed walkthrough of the above formats is provided in AN304, as well as in sections 7 and 8 of the PMBus Specification Part II. The custom data formats vary depending on the command, and are detailed in the command description.

Standard Commands

The functionality of commands with code 0x00 to 0xCF is usually based on the corresponding command specification provided in the PMBus Standard Specification Part II (see Power System Management Bus Protocol Documents below). However there might be different interpretations of the PMBus Standard Specification or only parts of the Standard Specification applied, thus the detailed command description below should always be consulted.

Forum Websites

The System Management Interface Forum (SMIF)

http://www.powersig.org/

The System Management Interface Forum (SMIF) supports the rapid advancement of an efficient and compatible technology base that promotes power management and systems technology implementations. The SMIF provides a membership path for any company or individual to be active participants in any or all of the various working groups established by the implementer forums.

Power Management Bus Implementers Forum (PMBUS-IF)

http://pmbus.org/

The PMBus-IF supports the advancement and early adoption of the PMBus protocol for power management. This website offers recent PMBus specification documents, PMBus articles, as well as upcoming PMBus presentations and seminars, PMBus Document Review Board (DRB) meeting notes, and other PMBus related news.

PMBus – Power System Management Bus Protocol Documents

These specification documents may be obtained from the PMBus-IF website described above. These are required reading for complete understanding of the PMBus implementation. This appendix will not re-address all of the details contained within the two PMBus Specification documents.

Specification Part I - General Requirements Transport And Electrical Interface

Includes the general requirements, defines the transport and electrical interface and timing requirements of hard wired signals.

Specification Part II - Command Language

Describes the operation of commands, data formats, fault management and defines the command language used with the PMBus.

SMBus – System Management Bus Documents

System Management Bus Specification, Version 2.0, August 3, 2000

This specification specifies the version of the SMBus on which Revision 1.2 of the PMBus Specification is based. This specification is freely available from the System Management Interface Forum Web site at: http://www.smbus.org/specs/



PMBus Command Summary and Factory Default Values of Standard Configuration

The factory default values provided in the table below are valid for the Standard configuration. Factory default values for other configurations can be found using the Flex Power Designer tool.

Code			fault Value	Min Set	Max Set	Unit	
			Standard		Value	Value	
				Configuration BMR323X000/001 R1			
0x01	OPERATION	R/W Byte	0x80				
0x02	ON_OFF_CONFIG	R/W Byte	0x17				
0x03	CLEAR FAULTS	Send Byte					
0x10	WRITE_PROTECT	R/W Byte					
0x12	RESTORE_DEFAULT_ALL	Send Byte					
0x15	STORE_USER_ALL	Send Byte					
0x16	RESTORE_USER_ALL	Send Byte					
0x19	CAPABILITY	Read Byte					
0x1B	SMBALERT_MASK_VOUT	SMBAlert	0x00				
	(STATUS_VOUT)	Mask					
0x1B	SMBALERT_MASK_IOUT	SMBAlert	0x00				
	(STATUS_IOUT)	Mask					
0x1B	SMBALERT_MASK_INPUT	SMBAlert	0x00				
	(STATUS_INPUT)	Mask					
0x1B	SMBALERT_MASK_TEMPERATU	SMBAlert	0x00				
	RE (STATUS_TEMPERATURE)	Mask					
0x1B	SMBALERT_MASK_CML	SMBAlert	0x00				
	(STATUS_CML)	Mask					
0x1B	SMBALERT_MASK_OTHER	SMBAlert	0x00				
	(STATUS_OTHER)	Mask					
0x1B	SMBALERT_MASK_MFR_SPECIFI	SMBAlert	0x00				
	C (STATUS_MFR_SPECIFIC)	Mask					
0x20	VOUT_MODE	Read Byte	0x14				
0x35	VIN_ON	R/W Word	0xE250	37.00			V
0x36	VIN_OFF	R/W Word	0xE230	35.00			V
0x37	INTERLEAVE	R/W Word	0x0120				
0x39	IOUT_CAL_OFFSET	R/W Word	Unit Specific				
0x40	VOUT_OV_FAULT_LIMIT	R/W Word	0x8400	8.25	0	16	V
0x41	VOUT_OV_FAULT_RESPONSE	R/W Byte	0x80				
0x42	VOUT_OV_WARN_LIMIT	R/W Word	0x7C02	7.75	0	16	V
0x43	VOUT_UV_WARN_LIMIT	R/W Word	0x219A	2.10	0	16	٧
0x44	VOUT_UV_FAULT_LIMIT	R/W Word	0x2000	2.00	0	16	٧
0x45	VOUT_UV_FAULT_RESPONSE	R/W Byte	0x80				
0x46	IOUT_OC_FAULT_LIMIT	R/W Word	0xF398	230.00	0	255	Α
0x47	IOUT_OC_FAULT_RESPONSE	R/W Byte	0xC0				
0x48	IOUT_OC_LV_FAULT_LIMIT	R/W Word	0x0000	0.00			٧
0x4A	IOUT_OC_WARN_LIMIT	R/W Word	0x0082	130.00	0	255	Α
0x4B	IOUT_UC_FAULT_LIMIT	R/W Word	0x07DD	-35.00			Α
0x4C	IOUT_UC_FAULT_RESPONSE	R/W Byte	0x00				
0x4F	OT_FAULT_LIMIT	R/W Word	0x007D	125.00	-50	150	°C
0x50	OT_FAULT_RESPONSE	R/W Byte	0x80				
0x51	OT_WARN_LIMIT	R/W Word	0x005A	90.00	-50	150	°C
0x52	UT_WARN_LIMIT	R/W Word	0x0000	0.00	-50	150	°C
0x53	UT_FAULT_LIMIT	R/W Word	0xE4E0	-50.00	-50	150	°C
0x54	UT_FAULT_RESPONSE	R/W Byte	0x00				
0x55	VIN_OV_FAULT_LIMIT	R/W Word	0xF100	64.00	0	128	V



0	TAINT ON EATHE DECDONICE	D /\/ D. 4-	000				
0x56	VIN_OV_FAULT_RESPONSE	R/W Byte	0x80	40.00	0	100	
0x57	VIN_OV_WARN_LIMIT	R/W Word	0xF0F8	62.00	0	128	V
0x58	VIN_UV_WARN_LIMIT	R/W Word	0xF002	0.50	0	128	V
0x59	VIN_UV_FAULT_LIMIT	R/W Word	0xF001	0.25	0	128	V
0x5A	VIN_UV_FAULT_RESPONSE	R/W Byte	0x00				<u>.</u>
0x5E	POWER_GOOD_ON	R/W Word	0x4CCD	4.80	0	16	٧
0x5F	POWER_GOOD_OFF	R/W Word	0x0048	4.50	0	16	V
0x60	TON_DELAY	R/W Word	0x0000	0.00	0	1023	ms
0x61	TON_RISE	R/W Word	0xF03C	15.00	0	1023	ms
0x62	TON_MAX_FAULT_LIMIT	R/W Word	0xF3FC	255.00			ms
0x63	TON_MAX_FAULT_RESPONSE	R/W Byte	0x00				
0x64	TOFF_DELAY	R/W Word	0xF804	2.00	0	1023	ms
0x65	TOFF_FALL	R/W Word	0xF320	200.00	0	1023	ms
0x66	TOFF_MAX_WARN_LIMIT	R/W Word	0xF370	220.00			ms
0x6A	POUT_OP_WARN_LIMIT	R/W Word	0x1177	1500.00			W
0x6B	PIN_OP_WARN_LIMIT	R/W Word	0x13E8	4000.00			W
0x78	STATUS_BYTE	Read Byte					
0x79	STATUS_WORD	Read Word					
0x7A	STATUS_VOUT	Read Byte					
0x7B	STATUS_IOUT	Read Byte					
0x7C	STATUS_INPUT	Read Byte					
0x7D	STATUS_TEMPERATURE	Read Byte					
0x7E	STATUS_CML	Read Byte					
0x7F	STATUS_OTHER	Read Byte					
0x80	STATUS_MFR_SPECIFIC	Read Byte					
0x88	READ_VIN	Read Word					
0x8B	READ_VOUT	Read Word					
0x8C	READ_IOUT	Read Word					
0x8D	READ_TEMPERATURE_1	Read Word					
0x8E	READ_TEMPERATURE_2	Read Word					
0x94	READ_DUTY_CYCLE	Read Word					
0x95	READ_FREQUENCY	Read Word					
0x98	PMBUS_REVISION	Read Byte					
0x99	MFR_ID	R/W Block12	Unit Specific	I			
0x9A	MFR_MODEL	R/W Block20	Unit Specific				
0x9B	MFR_REVISION	R/W Block12	Unit Specific				
0x9C	MFR_LOCATION	R/W Block12	Unit Specific				
0x9D	MFR_DATE	R/W Block12	Unit Specific				
0x7E	MFR_SERIAL	R/W Block20	Unit Specific				
0xB0	USER DATA 00	R/W Block16	Unit Specific				
0xC5	FW_CONFIG_REGULATION	R/W Block14	0xF800F800D	000F800F8			
OACO		N, TT BIOCKIA	000000A000	5501 5001 0			
0xC8	FW CONFIG FAULTS	R/W Block25	0x000000000	000002000			
OXCO	177_001110_1710213	R/ W BIOCKES	0000000000				
			00000000000				
0xC9	FW_CONFIG_PMBUS	R/W Block11	0x000000008 2001				
0xCA	MFR_IOUT_OC_FAST_FAULT_RE SPONSE	R/W Byte	0xC0				
0xD0	MFR_IOUT_AVG_OC_FAULT_LI	R/W Word	0xF26C	155.00			Α
0xD1	MFR_IOUT_OC_FAST_FAULT_LI	R/W Word	0x00FA	250			Α
0xD2	MFR_IOUT_AVG_COEFF	R/W Byte	0x14				
0xD7	MFR_READ_EVENT	R/W Block26	3/(1)	1			
U/LD/		A, A DIOCKEO	ı		Ī	1	1



0xDA	MFR_READ_VAUX	Read Word			
0xDB	MFR_EVENT_INDEX	R/W Word			
0xDC	MFR_SELECT_TEMPERATURE_SE	R/W Byte	0x00		
	NSOR				
0xE0	MFR_FLEX_FIRMWARE_CMD	R/W Block8			
0xE7	MFR_TEMP_COEFF	R/W Word	0x0090		
0xEA	MFR_IOUT_APC	R/W Word	Unit Specific		
0xF9	MFR MULTI PIN CONFIG	R/W Word	0x0202		



PMBus Command Details

OPERATION (0x01)

Description: Sets the desired PMBus enable and margin operations.

Bit	Function	Description	Value	Function	Description
7:6	Enable	Make the device enable or disable.	00	Immediate Off	Disable Immediately without sequencing.
			01	Soft Off	Disable "Softly" with sequencing.
			10	Enable	Enable device to the desired margin state.
5:4	Margin	Select between margin high/low states or nominal	00	Nominal	Operate at nominal output voltage.
		output.	01	Margin Low	Operate at margin low voltage set in VOUT_MARGIN_LOW.
			10	Margin High	Operate at margin high voltage set in VOUT_MARGIN_HIGH.
3:2	Act on Fault	Set 10b to act on fault or set to 01b to ignore fault.	01	Ignore Faults	Ignore Faults when in a margined state. The device will ignore appropriate overvoltage/undervoltage warnings and faults and respond as programmed by the warning limit or fault response command.
			10	Act on Faults	Act on Faults when in a margined state. The device will handle appropriate overvoltage/undervoltage warnings and faults and respond as programmed by the warning limit or fault response command.

ON_OFF_CONFIG (0x02)

Description: Configures how the device is controlled by the CONTROL pin and the PMBus.

Bit	Function	Description	Value	Function	Description
4	Powerup Operation	Sets the default to either operate any time power is present or for the on/off to be controlled by CONTROL pin and serial bus commands.	0	Enable Always	Unit powers up any time power is present regardless of state of the CONTROL pin, taking the RC configuration into account, see command 0xE3.
			1	Enable pin or PMBus	Unit does not power up until commanded by the CONTROL pin and OPERATION command.
3	PMBus Enable Mode	Controls how the unit responds to commands received via the serial bus.	0	Ignore PMBus	Unit ignores the on/off portion of the OPERATION command from serial bus.



			1	Use PMBus	To start, the unit requires that the on/off portion of the OPERATION command is instructing the unit to run.
2	Enable Pin Mode	Controls how the unit responds to the CONTROL pin.	0	Ignore pin	Unit ignores the CONTROL/Enable pin.
			1	Use pin	Unit requires the CONTROL pin to be asserted to start the unit.
1	Enable Pin Polarity	Polarity of the CONTROL pin.	0	Active Low	Enable pin will cause device to enable when driven low.
			1	Active High	Enable pin will cause device to enable when driven high.
0	Disable Action	CONTROL pin action when commanding the unit to turn	0	Soft Off	Use the programmed turn off delay and fall time.
		off.	1	Imm. Off	Turn off the output and stop transferring energy to the output as fast as possible. The device's product literature shall specify whether or not the device sinks current to decrease the output voltage fall time.

CLEAR_FAULTS (0x03)

Description: Clears all fault status bits

WRITE_PROTECT (0x10)

Description: The WRITE_PROTECT command is used to control writing to the PMBus device. The intent of this command is to provide protection against accidental changes. This command is not intended to provide protection against deliberate or malicious changes to a device's configuration or operation.

Bit	Description	Value	Function	Description
7:0	All supported commands may have their parameters read, regardless of the WRITE_PROTECT settings.	0x80	Disable all writes	Disable all writes except to the WRITE_PROTECT command.
		0x40	Enable operation	Disable all writes except to the WRITE_PROTECT, OPERATION and PAGE commands.
		0x20	Enable control and Vout commands	Disable all writes except to the WRITE_PROTECT, OPERATION, PAGE, ON_OFF_CONFIG and VOUT_COMMAND commands.
		0x00	Enable all commands	Enable writes to all commands.

RESTORE_DEFAULT_ALL (0x12)

Description: Commands the device to restore its configuration from the Default Store.

STORE_USER_ALL (0x15)

Description: Stores, at the USER level, all PMBus values that were changed since the last restore command.



RESTORE_USER_ALL (0x16)

Description: Restores PMBus settings that were stored using STORE_USER_ALL. This command is automatically performed at power up.

CAPABILITY (0x19)

Description: This command provides a way for a host system to determine some key capabilities of a PMBus device.

Bit	Function	Description	Value	Function	Description
7	Packet Error Checking	Packet error checking.	0	Not Supported	Packet Error Checking not supported.
			1	Supported	Packet Error Checking is supported.
6:5	Maximum Bus Speed	Maximum bus speed.	00	100kHz	Maximum supported bus speed is 100 kHz.
			01	400kHz	Maximum supported bus speed is 400 kHz.
			10	1MHz	Maximum supported bus speed is 1 MHz.
4	Smbalert	SMBALERT	00	No Smbalert	The device does not have a SMBALERT# pin and does not support the SMBus Alert Response protocol.
			01	Have Smbalert	The device does have a SMBALERT# pin and does support the SMBus Alert Response protocol.
3	Numeric Format	Numeric format.	0	LINEAR or DIRECT Format	Numeric data is in LINEAR or DIRECT format.
			1	IEEE Half Precision Floating Point Format	Numeric data is in IEEE half precision floating point format.
2	AVSBus Support	AVSBus support.	0	AVSBus Not Supported	AVSBus not supported.
			1	AVSBus Supported	AVSBus supported.

SMBALERT_MASK_VOUT (0x1B)

Status Registers: STATUS_VOUT (0x7A)

Description: SMBALERT_MASK bits for the STATUS_VOUT command. The SMBALERT_MASK command may be used to prevent a warning or fault condition from asserting the SALERT output signal.

Bit	Function	Description	Value	Function	Description
7	Vout		0	Pull SALERT	
	Overvoltage		1	Ignore	
	Fault				
6	Vout		0	Pull SALERT	
	Overvoltage		1	Ignore	
	Warning				
5	Vout		0	Pull SALERT	
	Undervoltage		1	Ignore	
	Warning				
4	Vout		0	Pull SALERT	
	Undervoltage		1	Ignore	
	Fault				



3	Vout Max	0	Pull SALERT
	Warning	1	Ignore
2	Ton Max Fault	0	Pull SALERT
		1	Ignore
1	Toff Max	0	Pull SALERT
	Warning	1	Ignore

SMBALERT_MASK_IOUT (0x1B)

Status Registers: STATUS_IOUT (0x7B)

Description: SMBALERT_MASK bits for the STATUS_IOUT command. The SMBALERT_MASK command may be used to prevent a warning or fault condition from asserting the SALERT output signal.

Bit	Function	Description	Value	Function	Description
7	lout		0	Pull SALERT	
	Overcurrent		1	Ignore	
	Fault				
6	lout		0	Pull SALERT	
	Overcurrent		1	Ignore	
	And Low				
	Voltage Fault				
5	lout Over		0	Pull SALERT	
	Current		1	Ignore	
	Warning				
4	lout		0	Pull SALERT	
	Undercurrent		1	Ignore	
	Fault			_	

SMBALERT_MASK_INPUT (0x1B)

Status Registers: STATUS_INPUT (0x7C)

Description: SMBALERT_MASK bits for the STATUS_INPUT command. The SMBALERT_MASK command may be used to prevent a warning or fault condition from asserting the SALERT output signal.

Bit	Function	Description	Value	Function	Description
7	Vin		0	Pull SALERT	
	Overvoltage		1	Ignore	
	Fault				
6	Vin		0	Pull SALERT	
	Overvoltage		1	Ignore	
	Warning				
5	Vin		0	Pull SALERT	
	Undervoltage		1	Ignore	
	Warning				
4	Vin		0	Pull SALERT	
	Undervoltage		1	Ignore	
	Fault				
3	Insufficient		0	Pull SALERT	
	Vin		1	Ignore	

SMBALERT_MASK_TEMPERATURE (0x1B)

Status Registers: STATUS_TEMPERATURE (0x7D)

Description: SMBALERT_MASK bits for the STATUS_TEMPERATURE command. The SMBALERT_MASK command may be used to prevent a warning or fault condition from asserting the SALERT output signal.

Bit	Function	Description	Value	Function	Description
7	Overtempera		0	Pull SALERT	
	ture Fault		1	Ignore	



6	Overtempera	0	Pull SALERT	
	ture Warning	1	Ignore	
5	Undertemper	0	Pull SALERT	
	ature	1	Ignore	
	Warning			
4	Undertemper	0	Pull SALERT	
	ature Fault	1	Ignore	

SMBALERT_MASK_CML (0x1B)

Status Registers: STATUS_CML (0x7E)

Description: SMBALERT_MASK bits for the STATUS_CML command. The SMBALERT_MASK command may be used to prevent a warning or fault condition from asserting the SALERT output signal.

Bit	Function	Description	Value	Function	Description
7	Invalid Or		0	Pull SALERT	
	Unsupported		1	Ignore	
	Command				
	Received				
6	Invalid Or		0	Pull SALERT	
	Unsupported		1	Ignore	
	Data				
	Received				
5	Packet Error		0	Pull SALERT	
	Check Failed		1	Ignore	
4	Memory Fault		0	Pull SALERT	
	Detected		1	Ignore	
3	Processor		0	Pull SALERT	
	Fault		1	Ignore	
	Detected				
1	Other		0	Pull SALERT	
	Communicati		1	Ignore	
	on Fault				
0	Memory Or		0	Pull SALERT	
	Logic Fault		1	Ignore	

SMBALERT_MASK_OTHER (0x1B)

Status Registers: STATUS_OTHER (0x7F)

Description: SMBALERT_MASK bits for the STATUS_OTHER command. The SMBALERT_MASK command may be used to prevent a warning or fault condition from asserting the SALERT output signal.

Bit	Description	Value	Function	Description
0		0	Pull SALERT	
		1	Ignore	

SMBALERT_MASK_MFR_SPECIFIC (0x1B)

Status Registers: STATUS_MFR_SPECIFIC (0x80)

Description: SMBALERT_MASK bits for the STATUS_MFR_SPECIFIC command. The SMBALERT_MASK command may be used to prevent a warning or fault condition from asserting the SALERT output signal.

Bit	Function	Description	Value	Function	Description
7	Sync Fault		0	Pull SALERT	
			1	Ignore	
6	lout Average		0	Pull SALERT	
	Overcurrent		1	Ignore	
	Fault				



5	lout Fast	0	Pull SALERT	
	Overcurrent Fault	1	Ignore	
			D. II 0 4 4 5DT	
4	Short Circuit	0	Pull SALERT	
	Protection	1	Ignore	
	Fault			
3	Overtempera	0	Pull SALERT	
	ture2 Fault	1	Ignore	
2	Auxiliary	0	Pull SALERT	
	Voltage Fault	1	Ignore	
1	Startup Over	0	Pull SALERT	
	Current Fault	1	Ignore	
0	Overtempera	0	Pull SALERT	
	ture2 Warn	1	Ignore	

VOUT_MODE (0x20)

Description: Controls how future VOUT-related commands parameters will be interpreted.

Bit	Function	Description	Format
4:0		Five bit two's complement EXPONENT for the MANTISSA delivered as the data bytes for VOUT_COMMAND in VOUT_LINEAR Mode, five bit VID code identifier per in VID Mode or always set to 00000b in Direct Mode.	Integer Signed

Bit	Function	Description	Value	Function	Description
7:5		Set to 000b to select	000	Linear	Linear Mode Format.
		VOUT_LINEAR Mode (Five bit	001	VID	VID Mode.
		two's complement exponent for the MANTISSA delivered as the data bytes for an output voltage related command), set to 001b to select VID Mode (Five bit VID code identifier per) or set to 010b to select Direct Mode (Always set to 0000b).	010	Direct	Direct Mode.

VIN_ON (0x35)

Description: The VIN_ON command sets the value of the input voltage, in volts, at which the unit should start power conversion.

Bit	Description	Format	Unit
15:0	Sets the VIN ON threshold.	Linear	٧

VIN_OFF (0x36)

Description: The VIN_OFF command sets the value of the input voltage, in volts, at which the unit, once operation has started, should stop power conversion.

Bit	Description	Format	Unit
15:0	Sets the VIN OFF threshold.	Linear	٧

INTERLEAVE (0x37)

Description: Configures the phase offset with respect to a common SYNC clock. When multiple products share a common DC input supply, spreading of the switching phases between the products can be utilized. This reduces the input capacitance requirements and efficiency losses, since the peak current drawn from the input supply is effectively spread out over the whole switch period. If two or more units have their outputs connected in parallel, interleaving will reduce ripple currents. This requires that the products are synchronized using the SYNC pin.



Bit	Function	Description	Format
11:8	Group ID Number	Value 0-15. Sets an ID number to a group of interleaved rails.	Integer Unsigned
7:4	Number of	Value 0-15. Sets the number of units in the group, including the SYNC	Integer Unsigned
	Rails	OUT product.	
3:0	Rail Position	Value 0-15. Sets the interleave order for this unit. The product	Integer Unsigned
		configured to SYNC OUT shall be assigned to number 0	

IOUT_CAL_OFFSET (0x39)

Description: Sets the current-sense offset.

Bit	Description	Format	Unit
15:0	Sets an offset to IOUT readings. Use to compensate for delayed measurements of	Linear	Α
	current ramp.		

VOUT_OV_FAULT_LIMIT (0x40)

Description: Output over voltage fault limit.

Bit	Description	Format	Unit
15:0	Output over voltage fault limit.	Vout	٧
		Mode	
		Unsigned	
		(Exp = -12)	

VOUT_OV_FAULT_RESPONSE (0x41)

Description: Output over voltage fault response.

Bit	Function	Description	Value	Function	Description
7:6	Response	Describes the device interruption operation. 00b - The PMBus device continues	00	Ignore Fault	The PMBus device continues operation without interruption.
		operation without interruption. 01b - The PMBus device continues operation for the delay time specified by bits [2:0] and the delay time unit specified for that particular fault. If the fault condition is still present at the end of the delay time, the unit responds as programmed in the Retry	01	Perform Retries while Operating	The PMBus device continues operation for the delay time specified by bits [2:0] and the delay time unit specified for that particular fault. If the fault condition is still present at the end of the delay time, the unit responds as programmed in the Retry Setting (bits [5:3]).
		Setting (bits [5:3]). 10b - The device shuts down (disables the output) and responds according to the Retry Setting	10	Disable and retry	The device shuts down (disables the output) and responds according to the retry setting in bits [5:3].
		in bits [5:3]. 11b - The device's output is disabled while the fault is present. Operation resumes and the output is enabled when the fault condition no longer exists.	11	Disable, Resume When OK	The device's output is disabled while the fault is present. Operation resumes and the output is enabled when the fault condition no longer exists.



5:3	Retries	The device attempts to restart the number of times set by these bits. 000b means the device does not attempt a	000	Do Not Retry	A zero value for the Retry Setting means that the unit does not attempt to restart. The output remains disabled
		restart. 111b means the device attempts restarting			until the fault is cleared (Section 10.7).
		continuously.	001	Retry Once	The PMBus device attempts to restart 1 time. If the device fails to restart, it disables the output and remains off until the fault is cleared as described in Section 10.7. The time between the start of each attempt to restart is set by the value in bits [2:] along with the delay time unit specified for that particular fault.
			010	Retry Twice	The PMBus device attempts to restart 2 times. If the device fails to restart, it disables the output and remains off until the fault is cleared as described in Section 10.7. The time between the start of each attempt to restart is set by the value in bits [2:] along with the delay time unit specified for that particular fault.
			011	Retry 3 times	The PMBus device attempts to restart 3 times. If the device fails to restart, it disables the output and remains off until the fault is cleared as described in Section 10.7. The time between the start of each attempt to restart is set by the value in bits [2:] along with the delay time unit specified for that particular fault.
			100	Retry 4 times	The PMBus device attempts to restart 4 times. If the device fails to restart, it disables the output and remains off until the fault is cleared as described in Section 10.7. The time between the start of each attempt to restart is set by the value in bits [2:] along with the delay time unit specified for that particular fault.



			101	Retry 5 times	The PMBus device attempts to restart 5 times. If the device fails to restart, it disables the output and remains off until the fault is cleared as described in Section 10.7. The time between the start of each attempt to restart is set by the value in bits [2:] along with the delay time unit specified for that particular fault.
			110	Retry 6 times	The PMBus device attempts to restart 6 times. If the device fails to restart, it disables the output and remains off until the fault is cleared as described in Section 10.7. The time between the start of each attempt to restart is set by the value in bits [2:] along with the delay time unit specified for that particular fault.
			111	Retry Continuously	The PMBus device attempts to restart continuously, without limitation, until it is commanded OFF (by the CONTROL pin or OPERATION command or both), bias power is removed, or another fault condition causes the unit to shut down.
2:0	Retry Time	Number of delay time units.	0	1	OTHER SHOT GOVERN
	and Delay	Used for either the amount of	1	2	
	Time	time the device is to continue	2	4	
		operating after a fault is	3	8	
		detected or for the amount of time between attempts to	4	16	
		restart. The time unit is set in	5	32	
		register 0xD2.	6	64	
		109,5101 0,022.	7	128	

VOUT_OV_WARN_LIMIT (0x42)

Description: Output over voltage warning limit.

Bit	Description	Format	Unit
15:0	Output over voltage warning limit.	Vout	V
		Mode	
		Unsigned	
		(Exp = -12)	

VOUT_UV_WARN_LIMIT (0x43)

Description: Output under voltage warning limit.

Bit	Description	Format	Unit



15:0	Output under voltage warning limit.	Vout	٧
		Mode	
		Unsigned	
		(Exp = -12)	

VOUT_UV_FAULT_LIMIT (0x44)

Description: Output under voltage fault limit.

Bit	Description	Format	Unit
15:0	Output under voltage fault limit.	Vout	٧
		Mode	
		Unsigned	
		(Exp = -12)	

VOUT_UV_FAULT_RESPONSE (0x45)

Description: Output under voltage fault response.

Bit	Function	Description	Value	Function	Description
7:6	Response	Describes the device interruption operation. 00b - The PMBus device continues	00	Ignore Fault	The PMBus device continues operation without interruption.
		operation without interruption. 01b - The PMBus device continues operation for the delay time specified by bits [2:0] and the delay time unit specified for that particular fault. If the fault condition is still present at the end of the delay time, the unit responds as programmed in the Retry	01	Perform Retries while Operating	The PMBus device continues operation for the delay time specified by bits [2:0] and the delay time unit specified for that particular fault. If the fault condition is still present at the end of the delay time, the unit responds as programmed in the Retry Setting (bits [5:3]).
		Setting (bits [5:3]). 10b - The device shuts down (disables the output) and responds according to the Retry Setting	10	Disable and retry	The device shuts down (disables the output) and responds according to the retry setting in bits [5:3].
		in bits [5:3]. 11b - The device's output is disabled while the fault is present. Operation resumes and the output is enabled when the fault condition no longer exists.	11	Disable, Resume When OK	The device's output is disabled while the fault is present. Operation resumes and the output is enabled when the fault condition no longer exists.
5:3	Retries		000	Do Not Retry	A zero value for the Retry Setting means that the unit does not attempt to restart. The output remains disabled until the fault is cleared (Section 10.7).



The device attempts to restart the number of times set by these bits. 000b means the device does not attempt a restart. 111b means the device attempts restarting continuously.	001	Retry Once	The PMBus device attempts to restart 1 time. If the device fails to restart, it disables the output and remains off until the fault is cleared as described in Section 10.7. The time between the start of each attempt to restart is set by the value in bits [2:] along with the delay time unit specified for that particular fault.
	010	Retry Twice	The PMBus device attempts to restart 2 times. If the device fails to restart, it disables the output and remains off until the fault is cleared as described in Section 10.7. The time between the start of each attempt to restart is set by the value in bits [2:] along with the delay time unit specified for that particular fault.
	011	Retry 3 times	The PMBus device attempts to restart 3 times. If the device fails to restart, it disables the output and remains off until the fault is cleared as described in Section 10.7. The time between the start of each attempt to restart is set by the value in bits [2:] along with the delay time unit specified for that particular fault.
	100	Retry 4 times	The PMBus device attempts to restart 4 times. If the device fails to restart, it disables the output and remains off until the fault is cleared as described in Section 10.7. The time between the start of each attempt to restart is set by the value in bits [2:] along with the delay time unit specified for that particular fault.



			101	Retry 5 times	The PMBus device attempts to restart 5 times. If the device fails to restart, it disables the output and remains off until the fault is cleared as described in Section 10.7. The time between the start of each attempt to restart is set by the value in bits [2:] along with the delay time unit specified for that particular fault.
			110	Retry 6 times	The PMBus device attempts to restart 6 times. If the device fails to restart, it disables the output and remains off until the fault is cleared as described in Section 10.7. The time between the start of each attempt to restart is set by the value in bits [2:] along with the delay time unit specified for that particular fault.
			111	Retry Continuously	The PMBus device attempts to restart continuously, without limitation, until it is commanded OFF (by the CONTROL pin or OPERATION command or both), bias power is removed, or another fault condition causes the unit to shut down.
2:0	Retry Time	Number of delay time units.	0	1	OTHER SHOT GOVERN
	and Delay	Used for either the amount of	1	2	
	Time	time the device is to continue	2	4	
		operating after a fault is	3	8	
		detected or for the amount of time between attempts to	4	16	
		restart. The time unit is set in	5	32	
		register 0xD2.	6	64	
		109,5101 0,022.	7	128	

IOUT_OC_FAULT_LIMIT (0x46)

Description: Output over current limit.

Bit	Description	Format	Unit
15:0	Output over current fault limit.	Linear	Α

IOUT_OC_FAULT_RESPONSE (0x47)
Description: Output over current fault response.

Bit	Function	Description	Value	Function	Description



7:6	Response	For all values of bits [7:6], the device: Sets the corresponding fault bit in the status registers and If the device supports notifying the host, it does so.	00	Ignore Fault	The PMBus device continues to operate indefinitely while maintaining the output current at the value set by IOUT_OC_FAULT_LIMIT without regard to the output voltage (known as constant-current or brickwall limiting).
			01	Conditioned constant current	The PMBus device continues to operate indefinitely while maintaining the output current at the value set by IOUT_OC_FAULT_LIMIT as long as the output voltage remains above the minimum value specified by IOUT_OC_LV_FAULT_LIMIT. If the output voltage is pulled down to less than that value, then the PMBus device shuts down and responds according to the Retry setting in bits [5:3].
			10	Delay w/ Const. Current & Retry	The PMBus device continues to operate, maintaining the output current at the value set by IOUT_OC_FAULT_LIMIT without regard to the output voltage, for the delay time set by bits [2:0] and the delay time units for specified in the IOUT_OC_FAULT_RESPONSE. If the device is still operating in current limiting at the end of the delay time, the device responds as programmed by the Retry Setting in bits [5:3].
			11	Disable, Resume When OK	The device's output is disabled while the fault is present. Operation resumes and the output is enabled when the fault condition no longer exists.
5:3	Retries		000	Do Not Retry	A zero value for the Retry Setting means that the unit does not attempt to restart. The output remains disabled until the fault is cleared (Section 10.7).



The device attempts to restart the number of times set by these bits. 000b means the device does not attempt a restart. 111b means the device attempts restarting continuously.	001	Retry Once	The PMBus device attempts to restart 1 time. If the device fails to restart, it disables the output and remains off until the fault is cleared as described in Section 10.7. The time between the start of each attempt to restart is set by the value in bits [2:] along with the delay time unit specified for that particular fault.
	010	Retry Twice	The PMBus device attempts to restart 2 times. If the device fails to restart, it disables the output and remains off until the fault is cleared as described in Section 10.7. The time between the start of each attempt to restart is set by the value in bits [2:] along with the delay time unit specified for that particular fault.
	011	Retry 3 times	The PMBus device attempts to restart 3 times. If the device fails to restart, it disables the output and remains off until the fault is cleared as described in Section 10.7. The time between the start of each attempt to restart is set by the value in bits [2:] along with the delay time unit specified for that particular fault.
	100	Retry 4 times	The PMBus device attempts to restart 4 times. If the device fails to restart, it disables the output and remains off until the fault is cleared as described in Section 10.7. The time between the start of each attempt to restart is set by the value in bits [2:] along with the delay time unit specified for that particular fault.



			101	Retry 5 times	The PMBus device attempts to restart 5 times. If the device fails to restart, it disables the output and remains off until the fault is cleared as described in Section 10.7. The time between the start of each attempt to restart is set by the value in bits [2:] along with the delay time unit specified for that particular fault.
			110	Retry 6 times	The PMBus device attempts to restart 6 times. If the device fails to restart, it disables the output and remains off until the fault is cleared as described in Section 10.7. The time between the start of each attempt to restart is set by the value in bits [2:] along with the delay time unit specified for that particular fault.
			111	Retry Continuously	The PMBus device attempts to restart continuously, without limitation, until it is commanded OFF (by the CONTROL pin or OPERATION command or both), bias power is removed, or another fault condition causes the unit to shut down.
2:0	Retry Time	Number of delay time units.	0	1	OTHER SHOT GOVERN
	and Delay	Used for either the amount of	1	2	
	Time	time the device is to continue	2	4	
		operating after a fault is	3	8	
		detected or for the amount of time between attempts to	4	16	
		restart. The time unit is set in	5	32	
		register 0xD2.	6	64	
		109,5101 0,022.	7	128	

IOUT_OC_LV_FAULT_LIMIT (0x48)

Description: Set the output over-current low-voltage fault threshold.

Bit	Description	Format	Unit
15:0	Set the output over-current low-voltage fault threshold.	Vout	٧
		Mode	
		Unsigned	
		(Exp = -12)	

IOUT_OC_WARN_LIMIT (0x4A)

Description: Output over current warning limit.

Bit	Description	Format	Unit
15:0	Output over current warning limit.	Linear	Α



IOUT_UC_FAULT_LIMIT (0x4B)

Description: Sets the output under-current peak limit.

Bit	Description	Format	Unit
15:0	Sets the IOUT under-current peak fault threshold.	Linear	Α

IOUT_UC_FAULT_RESPONSE (0x4C)

Description: Configures the output undercurrent fault response. The command format is the same as the PMBus standard responses for voltage and temperature faults except that it sets the undercurrent status bit.

Bit	Function	Description	Value	Function	Description
7:6	Response	Describes the device interruption operation. For all modes set by bits [7:6], the device pulls SALERT low and sets the related fault bit in the status registers.	00	Ignore Fault	The PMBus device continues operation without interruption.
			01	Perform Retries while Operating	The PMBus device continues operation for the delay time specified by bits [2:0] and the delay time unit specified for that particular fault. If the fault condition is still present at the end of the delay time, the unit responds as programmed in the Retry Setting (bits [5:3]).
			10	Disable and Retry	The device shuts down (disables the output) and responds according to the retry setting in bits [5:3].
			11	Disable, Resume When OK	The device's output is disabled while the fault is present. Operation resumes and the output is enabled when the fault condition no longer exists.
5:3		The device attempts to restart the number of times set by these bits.	000	Do Not Retry	A zero value for the Retry Setting means that the unit does not attempt to restart. The output remains disabled until the fault is cleared.
			001	Retry Once	The PMBus device attempts to restart 1 time. If the device fails to restart, it disables the output and remains off until the fault is cleared. The time between the start of each attempt to restart is set by the value in bits [2:0] along with the delay time unit specified for that particular fault.
			010	Retry Twice	The PMBus device attempts to restart 2 times.
			011	Retry 3 times	The PMBus device attempts to restart 3 times.
			100	Retry 4 times	The PMBus device attempts to restart 4 times.



			101	Retry 5 times	The PMBus device attempts to restart 5 times.
			110	Retry 6 times	The PMBus device attempts to restart 6 times.
			111	Retry Continuously	The PMBus device attempts to restart continuously, without limitation, until output is DISABLED, bias power is removed, or another fault condition causes the output to shut down.
2:0	Retry Time	Number of delay time units.	0	0	
	and Delay Time	Used for either the amount of	1	1	
		time the device (10 ms/unit) is	2	2	
		to continue operating after a	3	3	
		fault is detected or for the	4	4	
		amount of time (8.2 ms/unit) between attempts to restart.	5	5	
			6	6	
			7	7	

OT_FAULT_LIMIT (0x4F)

Description: Over temperature fault limit.

Bit	Description	Format	Unit
15:0	Over temperature fault limit.	Linear	°C

OT_FAULT_RESPONSE (0x50)

Description: Over temperature fault response.

Bit	Function	Description	Value	Function	Description
7:6	Response		00	Ignore Fault	The PMBus device continues operation without interruption.
			01	Perform Retries while Operating	The PMBus device continues operation for the delay time specified by bits [2:0] and the delay time unit specified for that particular fault. If the fault condition is still present at the end of the delay time, the unit responds as programmed in the Retry Setting (bits [5:3]).
			10	Disable and retry	The device shuts down (disables the output) and responds according to the retry setting in bits [5:3].
			11	Disable, Resume When OK	The device's output is disabled while the fault is present. Operation resumes and the output is enabled when the fault condition no longer exists.



5:3	Retries	000	Do Not Retry	A zero value for the Potry
J.3	Kellies			A zero value for the Retry Setting means that the unit does not attempt to restart. The output remains disabled until the fault is cleared (Section 10.7).
		001	Retry Once	The PMBus device attempts to restart 1 time. If the device fails to restart, it disables the output and remains off until the fault is cleared as described in Section 10.7. The time between the start of each attempt to restart is set by the value in bits [2:] along with the delay time unit specified for that particular fault.
		010	Retry Twice	The PMBus device attempts to restart 2 times. If the device fails to restart, it disables the output and remains off until the fault is cleared as described in Section 10.7. The time between the start of each attempt to restart is set by the value in bits [2:] along with the delay time unit specified for that particular fault.
		011	Retry 3 times	The PMBus device attempts to restart 3 times. If the device fails to restart, it disables the output and remains off until the fault is cleared as described in Section 10.7. The time between the start of each attempt to restart is set by the value in bits [2:] along with the delay time unit specified for that particular fault.
		100	Retry 4 times	The PMBus device attempts to restart 4 times. If the device fails to restart, it disables the output and remains off until the fault is cleared as described in Section 10.7. The time between the start of each attempt to restart is set by the value in bits [2:] along with the delay time unit specified for that particular fault.



			101	Retry 5 times	The PMBus device attempts to restart 5 times. If the device fails to restart, it disables the output and remains off until the fault is cleared as described in Section 10.7. The time between the start of each attempt to restart is set by the value in bits [2:] along with the delay time unit specified for that particular fault.
			110	Retry 6 times	The PMBus device attempts to restart 6 times. If the device fails to restart, it disables the output and remains off until the fault is cleared as described in Section 10.7. The time between the start of each attempt to restart is set by the value in bits [2:] along with the delay time unit specified for that particular fault.
			111	Retry Continuously	The PMBus device attempts to restart continuously, without limitation, until it is commanded OFF (by the CONTROL pin or OPERATION command or both), bias power is removed, or another fault condition causes the unit to shut down.
2:0	Retry Time	Number of delay time units.	0	1	
	and Delay	Used for either the amount of	1	2	
	Time	time the device is to continue	2	4	
		operating after a fault is	3	8	
		detected or for the amount of	4	16	
		time between attempts to restart. The time unit is set in	5	32	
		register 0xD2.	6	64	
		regisiei uxuz.	7	128	

OT_WARN_LIMIT (0x51)

Description: Over temperature warning limit.

Bit	Description	Format	Unit
15:0	Over temperature warning limit.	Linear	°C

UT_WARN_LIMIT (0x52)

Description: Under temperature warning limit.

Bit	Description	Format	Unit
15:0	Under temperature warning limit.	Linear	°C

UT_FAULT_LIMIT (0x53)

Description: Under temperature fault limit.



3it	Description	Format	Unit
15:0	Under temperature fault limit.	Linear	$^{\circ}$ C

UT_FAULT_RESPONSE (0x54)

Description: Under temperature fault response.

Bit	Function	Description	Value	Function	Description
7:6	Response		00	Ignore Fault	The PMBus device continues operation without interruption.
			01	Perform Retries while Operating	The PMBus device continues operation for the delay time specified by bits [2:0] and the delay time unit specified for that particular fault. If the fault condition is still present at the end of the delay time, the unit responds as programmed in the Retry Setting (bits [5:3]).
			10	Disable and retry	The device shuts down (disables the output) and responds according to the retry setting in bits [5:3].
			11	Disable, Resume When OK	The device's output is disabled while the fault is present. Operation resumes and the output is enabled when the fault condition no longer exists.
5:3	Retries		000	Do Not Retry	A zero value for the Retry Setting means that the unit does not attempt to restart. The output remains disabled until the fault is cleared (Section 10.7).
			001	Retry Once	The PMBus device attempts to restart 1 time. If the device fails to restart, it disables the output and remains off until the fault is cleared as described in Section 10.7. The time between the start of each attempt to restart is set by the value in bits [2:] along with the delay time unit specified for that particular fault.



010	Retry Twice	The PMBus device attempts to restart 2 times. If the device fails to restart, it disables the output and remains off until the fault is cleared as described in Section 10.7. The time between the start of each attempt to restart is set by the value in bits [2:] along with the delay time unit specified for that particular fault.
011	Retry 3 times	The PMBus device attempts to restart 3 times. If the device fails to restart, it disables the output and remains off until the fault is cleared as described in Section 10.7. The time between the start of each attempt to restart is set by the value in bits [2:] along with the delay time unit specified for that particular fault.
100	Retry 4 times	The PMBus device attempts to restart 4 times. If the device fails to restart, it disables the output and remains off until the fault is cleared as described in Section 10.7. The time between the start of each attempt to restart is set by the value in bits [2:] along with the delay time unit specified for that particular fault.
101	Retry 5 times	The PMBus device attempts to restart 5 times. If the device fails to restart, it disables the output and remains off until the fault is cleared as described in Section 10.7. The time between the start of each attempt to restart is set by the value in bits [2:] along with the delay time unit specified for that particular fault.



			110	Retry 6 times	The PMBus device attempts to restart 6 times. If the device fails to restart, it disables the output and remains off until the fault is cleared as described in Section 10.7. The time between the start of each attempt to restart is set by the value in bits [2:] along with the delay time unit specified for that particular fault.
			111	Retry Continuously	The PMBus device attempts to restart continuously, without limitation, until it is commanded OFF (by the CONTROL pin or OPERATION command or both), bias power is removed, or another fault condition causes the unit to shut down.
2:0	Retry Time	Number of delay time units.	0	1	
	and Delay	Used for either the amount of	1	2	
	Time	time the device is to continue	2	4	
		operating after a fault is	3	8	
		detected or for the amount of	4	16	
		time between attempts to restart. The time unit is set in	5	32	
		register 0xD2.	6	64	
		register uxuz.	7	128	

VIN_OV_FAULT_LIMIT (0x55)

Description: Input over voltage fault limit.

Bit	Description	Format	Unit
15:0	Input over voltage fault limit.	Linear	٧

VIN_OV_FAULT_RESPONSE (0x56)

Description: Input over voltage fault response.

Bit	Function	Description	Value	Function	Description
7:6	Response		00	Ignore Fault	The PMBus device continues operation without interruption.
			01	Perform Retries while Operating	The PMBus device continues operation for the delay time specified by bits [2:0] and the delay time unit specified for that particular fault. If the fault condition is still present at the end of the delay time, the unit responds as programmed in the Retry Setting (bits [5:3]).



		10	Disable and retry	The device shuts down (disables the output) and responds according to the retry setting in bits [5:3].
		11	Disable, Resume When OK	The device's output is disabled while the fault is present. Operation resumes and the output is enabled when the fault condition no longer exists.
5:3	Retries	000	Do Not Retry	A zero value for the Retry Setting means that the unit does not attempt to restart. The output remains disabled until the fault is cleared (Section 10.7).
		001	Retry Once	The PMBus device attempts to restart 1 time. If the device fails to restart, it disables the output and remains off until the fault is cleared as described in Section 10.7. The time between the start of each attempt to restart is set by the value in bits [2:] along with the delay time unit specified for that particular fault.
		010	Retry Twice	The PMBus device attempts to restart 2 times. If the device fails to restart, it disables the output and remains off until the fault is cleared as described in Section 10.7. The time between the start of each attempt to restart is set by the value in bits [2:] along with the delay time unit specified for that particular fault.
		011	Retry 3 times	The PMBus device attempts to restart 3 times. If the device fails to restart, it disables the output and remains off until the fault is cleared as described in Section 10.7. The time between the start of each attempt to restart is set by the value in bits [2:] along with the delay time unit specified for that particular fault.



			100	Retry 4 times	The PMBus device attempts to restart 4 times. If the device fails to restart, it disables the output and remains off until the fault is cleared as described in Section 10.7. The time between the start of each attempt to restart is set by the value in bits [2:] along with the delay time unit specified for that particular fault.
			101	Retry 5 times	The PMBus device attempts to restart 5 times. If the device fails to restart, it disables the output and remains off until the fault is cleared as described in Section 10.7. The time between the start of each attempt to restart is set by the value in bits [2:] along with the delay time unit specified for that particular fault.
			110	Retry 6 times	The PMBus device attempts to restart 6 times. If the device fails to restart, it disables the output and remains off until the fault is cleared as described in Section 10.7. The time between the start of each attempt to restart is set by the value in bits [2:] along with the delay time unit specified for that particular fault.
			111	Retry Continuously	The PMBus device attempts to restart continuously, without limitation, until it is commanded OFF (by the CONTROL pin or OPERATION command or both), bias power is removed, or another fault condition causes the unit to shut down.
2:0	Retry Time and Delay Time	Number of delay time units. Used for either the amount of time the device is to continue operating after a fault is detected or for the amount of time between attempts to restart. The time unit is set in register 0xD2.	0 1 2 3 4 5 6	1 2 4 8 16 32 64 128	

VIN_OV_WARN_LIMIT (0x57)

Description: Input over voltage warning limit.



Bit	Description	Format	Unit
15:0	Input over voltage warning limit.	Linear	V

VIN_UV_WARN_LIMIT (0x58)

Description: Input under voltage warning limit. This command set also the input voltage threshold for the HRR function (Hybrid Ratio Regulation). The HRR function is enabled with command MFR_SPECIAL_OPTIONS (0xE0).

Bit	Description	Format	Unit
15:0	Input under voltage warning limit and/or HRR threshold.	Linear	٧

VIN_UV_FAULT_LIMIT (0x59)

Description: Input under voltage fault limit.

Bit	Description	Format	Unit
15:0	Input under voltage fault limit.	Linear	V

VIN_UV_FAULT_RESPONSE (0x5A)

Description: Input under voltage fault response.

Bit	Function	Description	Value	Function	Description
7:6	Response		00	Ignore Fault	The PMBus device continues operation without interruption.
			01	Perform Retries while Operating	The PMBus device continues operation for the delay time specified by bits [2:0] and the delay time unit specified for that particular fault. If the fault condition is still present at the end of the delay time, the unit responds as programmed in the Retry Setting (bits [5:3]).
			10	Disable and retry	The device shuts down (disables the output) and responds according to the retry setting in bits [5:3].
			11	Disable, Resume When OK	The device's output is disabled while the fault is present. Operation resumes and the output is enabled when the fault condition no longer exists.
5:3	Retries		000	Do Not Retry	A zero value for the Retry Setting means that the unit does not attempt to restart. The output remains disabled until the fault is cleared (Section 10.7).



	001	Retry Once	The PMBus device attempts to restart 1 time. If the device fails to restart, it disables the output and remains off until the fault is cleared as described in Section 10.7. The time between the start of each attempt to restart is set by the value in bits [2:] along with the delay time unit specified for that particular fault.
	010	Retry Twice	The PMBus device attempts to restart 2 times. If the device fails to restart, it disables the output and remains off until the fault is cleared as described in Section 10.7. The time between the start of each attempt to restart is set by the value in bits [2:] along with the delay time unit specified for that particular fault.
	011	Retry 3 times	The PMBus device attempts to restart 3 times. If the device fails to restart, it disables the output and remains off until the fault is cleared as described in Section 10.7. The time between the start of each attempt to restart is set by the value in bits [2:] along with the delay time unit specified for that particular fault.
	100	Retry 4 times	The PMBus device attempts to restart 4 times. If the device fails to restart, it disables the output and remains off until the fault is cleared as described in Section 10.7. The time between the start of each attempt to restart is set by the value in bits [2:] along with the delay time unit specified for that particular fault.



			101	Retry 5 times	The PMBus device attempts to restart 5 times. If the device fails to restart, it disables the output and remains off until the fault is cleared as described in Section 10.7. The time between the start of each attempt to restart is set by the value in bits [2:] along with the delay time unit specified for that particular fault.
			110	Retry 6 times	The PMBus device attempts to restart 6 times. If the device fails to restart, it disables the output and remains off until the fault is cleared as described in Section 10.7. The time between the start of each attempt to restart is set by the value in bits [2:] along with the delay time unit specified for that particular fault.
			111	Retry Continuously	The PMBus device attempts to restart continuously, without limitation, until it is commanded OFF (by the CONTROL pin or OPERATION command or both), bias power is removed, or another fault condition causes the unit to shut down.
2:0	Retry Time	Number of delay time units.	0	1	
	and Delay	Used for either the amount of	1	2	
	Time	time the device is to continue	2	4	
		operating after a fault is	3	8	
		detected or for the amount of	4	16	
		time between attempts to restart. The time unit is set in	5	32	
		register 0xD2.	6	64	
		TOGISTOT ONDZ.	7	128	

POWER_GOOD_ON (0x5E)

Description: Sets the output voltage threshold for asserting PG (Power Good).

Bit	Description	Format	Unit
15:0	The POWER_GOOD_ON command sets the output voltage at which an optional	Vout	٧
	POWER_GOOD signal should be asserted.	Mode	
		Unsigned	
		(Exp = -12)	

POWER_GOOD_OFF (0x5F)

Description: Sets the output voltage threshold for deasserting PG (Power Good).

Bit	Description	Format	Unit



15:0	The POWER_GOOD_OFF command sets the output voltage at which an optional	Vout	V
	POWER_GOOD signal should be deasserted.	Mode	
		Unsigned	
		(Exp = -12)	

TON_DELAY (0x60)

Description: Sets the turn-on delay time

	Bit	Description	Format	Unit
Ī	15:0	Sets the delay time from ENABLE to start of VOUT rise.	Linear	ms

TON_RISE (0x61)

Description: Sets the turn-on transition time.

Bit	Description	Format	Unit
15:0	Sets the rise time of VOUT after ENABLE and TON_DELAY.	Linear	ms

TON_MAX_FAULT_LIMIT (0x62)

Description: Sets an upper limit, in milliseconds, on how long the unit can attempt to power up the output without reaching the output undervoltage fault limit.

Bit	Description	Format	Unit
15:0	A value of 0 milliseconds means that there is no limit and that the unit can attempt to	Linear	ms
	bring up the output voltage indefinitely.		

TON_MAX_FAULT_RESPONSE (0x63)

Description: Only some of the response types are supported.

Bit	Function	Description	Value	Function	Description
7:6	Response		00	Ignore Fault	The PMBus device continues operation without interruption.
			01	Perform Retries while Operating	The PMBus device continues operation for the delay time specified by bits [2:0] and the delay time unit specified for that particular fault. If the fault condition is still present at the end of the delay time, the unit responds as programmed in the Retry Setting (bits [5:3]).
			10	Disable and retry	The device shuts down (disables the output) and responds according to the retry setting in bits [5:3].
			11	Disable, Resume When OK	The device's output is disabled while the fault is present. Operation resumes and the output is enabled when the fault condition no longer exists.



5:3	Retries	000	Do Not Retry	A zero value for the Potry
J.3	Kellies			A zero value for the Retry Setting means that the unit does not attempt to restart. The output remains disabled until the fault is cleared (Section 10.7).
		001	Retry Once	The PMBus device attempts to restart 1 time. If the device fails to restart, it disables the output and remains off until the fault is cleared as described in Section 10.7. The time between the start of each attempt to restart is set by the value in bits [2:] along with the delay time unit specified for that particular fault.
		010	Retry Twice	The PMBus device attempts to restart 2 times. If the device fails to restart, it disables the output and remains off until the fault is cleared as described in Section 10.7. The time between the start of each attempt to restart is set by the value in bits [2:] along with the delay time unit specified for that particular fault.
		011	Retry 3 times	The PMBus device attempts to restart 3 times. If the device fails to restart, it disables the output and remains off until the fault is cleared as described in Section 10.7. The time between the start of each attempt to restart is set by the value in bits [2:] along with the delay time unit specified for that particular fault.
		100	Retry 4 times	The PMBus device attempts to restart 4 times. If the device fails to restart, it disables the output and remains off until the fault is cleared as described in Section 10.7. The time between the start of each attempt to restart is set by the value in bits [2:] along with the delay time unit specified for that particular fault.



			101	Retry 5 times	The PMBus device attempts to restart 5 times. If the device fails to restart, it disables the output and remains off until the fault is cleared as described in Section 10.7. The time between the start of each attempt to restart is set by the value in bits [2:] along with the delay time unit specified for that particular fault.
			110	Retry 6 times	The PMBus device attempts to restart 6 times. If the device fails to restart, it disables the output and remains off until the fault is cleared as described in Section 10.7. The time between the start of each attempt to restart is set by the value in bits [2:] along with the delay time unit specified for that particular fault.
			111	Retry Continuously	The PMBus device attempts to restart continuously, without limitation, until it is commanded OFF (by the CONTROL pin or OPERATION command or both), bias power is removed, or another fault condition causes the unit to shut down.
2:0	Retry Time	Number of delay time units.	0	1	-
	and Delay	Used for either the amount of	1	2	
	Time	time the device is to continue	2	4	
		operating after a fault is	3	8	
		detected or for the amount of time between attempts to	4	16	
		restart. The time unit is set in	5	32	
		register 0xD2.	7	64 128	
		TON_MAX_FAULT_RESPONSE time unit is referenced to VOUT FAULT time unit.	/	128	

TOFF_DELAY (0x64)
Description: Sets the turn-off delay.

ı	Bit	Description	Format	Unit
Ī	15:0	Sets the delay time from DISABLE to start of VOUT fall.	Linear	ms

TOFF_FALL (0x65)

Description: Sets the turn-off transition time.

Bit	Description	Format	Unit
15:0	Sets the fall time for VOUT after DISABLE and TOFF_DELAY.	Linear	ms



TOFF_MAX_WARN_LIMIT (0x66)

Description: Sets an upper limit, in milliseconds, on how long the unit can attempt to power down the output without reaching 12.5% of the output voltage programmed at the time the unit is turned off.

Bit	Description	Format	Unit
15:0		Linear	ms

POUT_OP_WARN_LIMIT (0x6A)

Description: Sets the output over-power warning limit.

Bit	Description	Format	Unit
15:0	Sets the output over-power warning threshold.	Linear	W

PIN_OP_WARN_LIMIT (0x6B)

Description: Sets the input over-power warning limit.

Bit	Description	Format	Unit
15:0	Sets the input over-power warning threshold.	Linear	W

STATUS_BYTE (0x78)

Description: Returns a brief fault/warning status byte.

Bit	Function	Description	Value	Description
7	Busy	This bit is asserted if the unit is busy	0	No fault
			1	Fault
6	Off	This bit is asserted if the unit is not providing	0	No fault
		power to the output, regardless of the reason, including simply not being enabled.	1	Fault
5	Vout Overvoltage	An output overvoltage fault has occurred.	0	No fault
	Fault	-	1	Fault
4	Iout Overcurrent	An output overcurrent fault has occurred.	0	No fault
	Fault		1	Fault
3	Vin Undervoltage	An input undervoltage fault has occurred.	0	No fault
	Fault		1	Fault
2	Temperature	A temperature fault or warning has occurred.	0	No fault
			1	Fault
1	Communication/Lo	A communications, memory or logic fault has	0	No fault
	gic	occurred.	1	Fault
0	None of the Above	A fault or warning not listed in bits [7:1] has	0	No fault
		occurred.	1	Fault

STATUS_WORD (0x79)

Description: Returns an extended fault/warning status byte.

Bit	Function	Description	Value	Description
15	Vout	An output voltage fault or warning has	0	No fault
		occurred.	1	Fault
14	lout/Pout	An output current or output power fault or	0	No Fault.
		warning has occurred.	1	Fault.
13	Input	An input voltage, input current, or input power	0	No Fault.
		fault or warning has occurred.	1	Fault.
12	Mfr Specific	A manufacturer specific fault or warning has	0	No fault.
		occurred.	1	Fault.
11	Power-Good	The Power-Good signal, if present, is negated.	0	No Fault.



			1	Fault.
9	Other	A bit in Status-Other is set.	0	No fault
			1	Fault
6	Off	This bit is asserted if the unit is not providing	0	No fault
		power to the output, regardless of the reason, including simply not being enabled.	1	Fault
5	Vout Overvoltage	An output overvoltage fault has occurred.	0	No Fault.
	Fault		1	Fault.
4	lout Overcurrent	An output overcurrent fault has occurred.	0	No Fault.
	Fault		1	Fault.
3	Vin Undervoltage	An input undervoltage fault has occurred.	0	No Fault.
	Fault		1	Fault.
2	Temperature	A temperature fault or warning has occurred.	0	No Fault.
			1	Fault.
1	Communication/Lo	A communications, memory or logic fault has	0	No fault.
	gic	occurred.	1	Fault.
0	None of the Above	A fault or warning not listed in bits [7:1] has	0	No fault.
		occurred.	1	Fault.

STATUS_VOUT (0x7A)Description: Returns Vout-related fault/warning status bits.

Bit	Function	Description	Value	Description
7	Vout Overvoltage	Vout Overvoltage Fault.	0	No Fault.
	Fault		1	Fault.
6	Vout Overvoltage	Vout Overvoltage Warning.	0	No Warning.
	Warning		1	Warning.
5	Vout Undervoltage	Vout Undervoltage Warning.	0	No Warning.
	Warning		1	Warning.
4	Vout Undervoltage	Vout Undervoltage Fault.	0	No Fault.
	Fault		1	Fault.
3	Vout Max Warning	Vout Max Warning (An attempt has been	0	No Warning.
		made to set the output voltage to value higher than allowed by the Vout Max command (Section 13.5).	1	Warning.
2	Ton Max Fault	Ton-Max Fault.	0	No Fault
			1	Fault.
1	Toff Max Warning	Toff Max Warning.	0	No Warning.
			1	Warning.

STATUS_IOUT (0x7B)

Description: Returns lout-related fault/warning status bits.

Bit	Function	Description	Value	Description
7	lout Overcurrent	lout Overcurrent Fault.	0	No Fault.
	Fault		1	Fault.
6	Iout Overcurrent	lout Overcurrent and low voltage fault.	0	No Fault.
	And Low Voltage		1	Fault.
	Fault			
5	Iout Over Current	lout Overcurrent Warning.	0	No Warning.
	Warning		1	Warning.
4	lout Undercurrent	lout Undercurrent Fault.	0	No Fault.
	Fault		1	Fault.



STATUS_INPUT (0x7C)

Description: Returns VIN/IIN-related fault/warning status bits.

Bit	Function	Description	Value	Description
7	Vin Overvoltage Fault	Vin Overvoltage Fault.	0	No Fault.
			1	Fault.
6	Vin Overvoltage VIN Ove	VIN Overvoltage Warning.	0	No Warning.
	Warning		1	Warning.
5	Vin Undervoltage Warning	Vin Undervoltage Warning.	0	No Warning.
			1	Warning.
4	Vin Undervoltage	Vin Undervoltage Fault.	0	No Fault.
	Fault		1	Fault.
3	Insufficient Vin	Asserted when either the input voltage has	0	No Insufficient VIN
		never exceeded the input turn-on threshold		encountered yet.
		Vin-On, or if the unit did start, the input voltage	1	Insufficient Unit is off.
		decreased below the turn-off threshold.		

STATUS_TEMPERATURE (0x7D)

Description: Returns the temperature-related fault/warning status bits

Bit	Function	Description	Value	Description
7	Overtemperature	Overtemperature Fault.	0	No Fault.
	Fault		1	Fault.
6	Overtemperature Overtemperature Warning	Overtemperature Warning.	0	No Warning.
	Warning		1	Warning.
5	Undertemperature Under	Indertemperature Warning.	0	No Warning.
	Warning		1	Warning.
4	Undertemperature Fault	Undertemperature Fault.	0	No Fault.
			1	Fault.

STATUS_CML (0x7E)

Description: Returns Communication/Logic/Memory-related fault/warning status bits.

Bit	Function	Description	Value	Description
7	Invalid Or Unsupported	Invalid Or Unsupported Command Received.	0	No Invalid Command Received.
	Command Received		1	Invalid Command Received.
6	Invalid Or Unsupported Data	Invalid Or Unsupported Data Received.	0	No Invalid Data Received.
	Received		1	Invalid Data Received.
5	Packet Error Check	Packet Error Check Failed.	0	No Failure.
	Failed		1	Failure.
4	Memory Fault Detected.	Memory Fault Detected.	0	No Fault.
	Detected		1	Fault.
3	Processor Fault	Processor fault detected.	0	No Fault.
	Detected		1	Fault.
1	Other	A communication fault other than the ones listed in this table has occurred.	0	No Fault.
	Communication Fault		1	Fault.
0	Memory Or Logic Other Memory Or Logic Fault has occurred. Fault	Other Memory Or Logic Fault has occurred.	0	No Fault.
		1	Fault.	

STATUS_OTHER (0x7F)

Description: Returns a brief other fault/warning status bits.



Bit	Description	Value	Description
0	The device was the first to assert SMBALERT.		

STATUS_MFR_SPECIFIC (0x80)

Description: Returns manufacturer specific status information.

Bit	Function	Description	Value	Description
7	Sync Fault	Sync fault.	0	No fault.
			1	Fault.
6	lout Average	lout average overcurrent fault.	0	No fault.
	Overcurrent Fault		1	Fault.
5	lout Fast	lout fast overcurrent fault.	0	No fault.
	Overcurrent Fault		1	Fault.
4	Short Circuit	Short circuit protection fault.	0	No fault.
	Protection Fault		1	Fault.
3	Overtemperature2	Overtemperature2 fault.	0	No fault.
	Fault		1	Fault.
2	Auxiliary Voltage	Auxiliary voltage fault.	0	No fault.
	Fault		1	Fault.
1	Startup Over	Startup over current fault.	0	No fault.
	Current Fault		1	Fault.
0	Overtemperature2	Overtemperature2 warn.	0	No fault.
	Warn		1	Fault.

READ_VIN (0x88)

Description: Returns the measured input voltage.

Bit	Description	Format	Unit
15:0	Returns the input voltage reading.	Linear	٧

READ_VOUT (0x8B)

Description: Returns the measured output voltage.

Bit	Description	Format	Unit
15:0	Returns the measured output voltage.	Vout	V
		Mode	
		Unsigned	
		(Exp = -12)	

READ_IOUT (0x8C)

Description: Returns the measured output current.

Bit	Description	Format	Unit
15:0	Returns the measured output current.	Linear	Α

READ_TEMPERATURE_1 (0x8D)

Description: Reads temperature from the temperature sensor chosen in MFR_SELECT_TEMPERATURE_SENSOR (0xDC) command.

Bit	Description	Format	Unit
15:0		Linear	°C



READ_TEMPERATURE_2 (0x8E)

Description: Reads temperature from the temperature sensor chosen in MFR_SELECT_TEMPERATURE_SENSOR (0xDC) command.

Bi		Description	Format	Unit
	5:0		Linear	°C

READ_DUTY_CYCLE (0x94)

Description: Returns the actual duty cycle in percent.

Bit	Description	Format	Unit
15:0	Returns the actual duty cycle in percent.	Linear	%

READ_FREQUENCY (0x95)

Description: Returns the actual switching frequency.

Bit	Description	Format	Unit
15:0	Returns the actual switching frequency.	Linear	kHz

PMBUS_REVISION (0x98)

Description: Returns the PMBus revision number for this device.

Bit	Function	Description	Value	Function	Description
7:4	Part I Revision	Part I Revision.	0x0	1.0	Part I Revision 1.0.
			0x1	1.1	Part I Revision 1.1.
			0x2	1.2	Part I Revision 1.2.
			0x3	1.3	Part I Revision 1.3.
3:0	Part II	Part II Revision.	0x0	1.0	Part II Revision 1.0.
	Revision		0x1	1.1	Part II Revision 1.1.
			0x2	1.2	Part II Revision 1.2.
			0x3	1.3	Part II Revision 1.3.

MFR_ID (0x99)

Description: Sets the Manufacturers ID

Bit	Description	Format
95:0	Maximum of 12 characters.	ASCII

MFR_MODEL (0x9A)

Description: Sets the MFR MODEL string.

Bit	Description	Format
159:0	Maximum of 20 characters.	ASCII

MFR_REVISION (0x9B)

Description: Sets the MFR revision string.

Bit	Description	Format
95:0	Maximum of 12 characters.	ASCII

MFR_LOCATION (0x9C)

Description: Sets the MFR location string.

Bit	Description	Format
95:0	Maximum of 12 characters.	ASCII



MFR_DATE (0x9D)

Description: This command returns the date the regulator was manufactured.

Bit	Description	Format
95:0	Maximum of 12 characters.	ASCII

MFR_SERIAL (0x9E)

Description: This command returns a string of 13 characters and numbers that provides a unique identification of the regulator.

Bit	Description	Format
159:0	Maximum of 20 characters.	ASCII

USER_DATA_00 (0xB0)

Description: This command is available as generic read/write storage for customers.

Bit	Description	Format
127:0	16 bytes of user data.	Byte Array

FW_CONFIG_REGULATION (0xC5)

Description: FW CONFIG REGULATION parameter

Bit	it Description		Function	Description
0	Enable diode emulation at startup		Disabled	
		1	Enabled	

FW_CONFIG_FAULTS (0xC8)

Description: FW CONFIG FAULTS parameter

Bit	Function	Description	Value	Function	Description
7:6	Vout Delay	Vout_Delay_Unit Time unit for	00	1ms/unit	Vout Delay Unit Time unit for
	Unit	retry responses. 0: 1ms, 1: 4ms,			retry responses
		2: 16ms, 3: 256ms	01	4ms/unit	Vout Delay Unit Time unit for
					retry responses
			10	16ms/unit	Vout Delay Unit Time unit for
					retry responses
			11	256ms/unit	Vout Delay Unit Time unit for
					retry responses
5:4	Vin Delay	Vin_Delay_Unit Time unit for	00	1ms/unit	Vin Delay Unit Time unit for
	Unit	retry responses. 0: 1ms, 1: 4ms, 2: 16ms, 3: 256ms			retry responses
			01	4ms/unit	Vin Delay Unit Time unit for
					retry responses
			10	16ms/unit	Vin Delay Unit Time unit for
					retry responses
			11	256ms/unit	Vin Delay Unit Time unit for
					retry responses
3:2	Iout Delay	IOUT_Delay_Unit Time unit for	00	1ms/unit	IOUT Delay Unit Time unit for
	Unit	retry responses. 0: 1ms, 1: 4ms,			retry responses
		2: 16ms, 3: 256ms	01	4ms/unit	IOUT Delay Unit Time unit for
					retry responses
			10	16ms/unit	IOUT Delay Unit Time unit for
					retry responses
			11	256ms/unit	IOUT Delay Unit Time unit for
					retry responses



1:0	Temperature	Temperature_Delay_Unit Time	00	1ms/unit	Temperature Delay Unit Time
	Delay Unit	unit for retry responses. 0: 1ms,			unit for retry responses
		1: 4ms, 2: 16ms, 3: 256ms	01	4ms/unit	Temperature Delay Unit Time
					unit for retry responses
			10	16ms/unit	Temperature Delay Unit Time
					unit for retry responses
			11	256ms/unit	Temperature Delay Unit Time
					unit for retry responses

FW_CONFIG_PMBUS (0xC9)

Description: This command contains various configurable settings related to PMBus address and digital pins.

Bit	Function	Description	Format
31:24	PMBus Base Addr	Base Address for PMBus offset to start from	Integer Unsigned
23:17	PMBus Addr Offset	PMBUS Address offset when resistor offset Not enabled	Integer Unsigned

Bit	Function	Description	Value	Function	Description
39	Power good	Power good polarity (1:active	0	Active low	
	polarity	high; 0: active low).	1	Active high	
32	Control pin	Control pin polarity (1:active	0	Active low	
	polarity	high; 0: active low).	1	Active high	
16	PMBus Addr	PMBus_addr_offset_enable	0	Disabled	
	Offset	Enable PMBUS Address Offset	1	Enabled	
	Resistor	via resistor			
	Enable				

MFR_IOUT_OC_FAST_FAULT_RESPONSE (0xCA)

Description: Output over current fault response.

Bit	Function	Description	Value	Function	Description
7:6	Response	For all values of bits [7:6], the device: Sets the corresponding fault bit in the status registers and If the device supports notifying the host, it does so.	00	Ignore Fault	The PMBus device continues to operate indefinitely while maintaining the output current at the value set by IOUT_OC_FAULT_LIMIT without regard to the output voltage (known as constant-current or brickwall limiting).
			11	Shutdown and Retry	The PMBus device continues to operate, maintaining the output current at the value set by IOUT_OC_FAST_FAULT_LIMIT without regard to the output voltage, for the delay time set by bits [2:0] and the delay time units for specified in the IOUT_OC_FAST_FAULT_RESPO NSE. If the device is still operating in current limiting at the end of the delay time, the device responds as programmed by the Retry Setting in bits [5:3].



5:3	Retries	The device attempts to restart the number of times set by these bits. 000b means the device does not attempt a restart. 111b means the device attempts restarting	000	Do Not Retry	A zero value for the Retry Setting means that the unit does not attempt to restart. The output remains disabled until the fault is cleared (Section 10.7).
	continuously.	001	Retry Once	The PMBus device attempts to restart 1 time. If the device fails to restart, it disables the output and remains off until the fault is cleared as described in Section 10.7. The time between the start of each attempt to restart is set by the value in bits [2:] along with the delay time unit specified for that particular fault.	
			010	Retry Twice	The PMBus device attempts to restart 2 times. If the device fails to restart, it disables the output and remains off until the fault is cleared as described in Section 10.7. The time between the start of each attempt to restart is set by the value in bits [2:] along with the delay time unit specified for that particular fault.
			011	Retry 3 times	The PMBus device attempts to restart 3 times. If the device fails to restart, it disables the output and remains off until the fault is cleared as described in Section 10.7. The time between the start of each attempt to restart is set by the value in bits [2:] along with the delay time unit specified for that particular fault.
			100	Retry 4 times	The PMBus device attempts to restart 4 times. If the device fails to restart, it disables the output and remains off until the fault is cleared as described in Section 10.7. The time between the start of each attempt to restart is set by the value in bits [2:] along with the delay time unit specified for that particular fault.



			101	Retry 5 times	The PMBus device attempts to restart 5 times. If the device fails to restart, it disables the output and remains off until the fault is cleared as described in Section 10.7. The time between the start of each attempt to restart is set by the value in bits [2:] along with the delay time unit specified for that particular fault.
			110	Retry 6 times	The PMBus device attempts to restart 6 times. If the device fails to restart, it disables the output and remains off until the fault is cleared as described in Section 10.7. The time between the start of each attempt to restart is set by the value in bits [2:] along with the delay time unit specified for that particular fault.
			111	Retry Continuously	The PMBus device attempts to restart continuously, without limitation, until it is commanded OFF (by the CONTROL pin or OPERATION command or both), bias power is removed, or another fault condition causes the unit to shut down.
2:0	Retry Time	Number of delay time units.	0	1	orm re sher devin.
	and Delay	Used for either the amount of	1	2	
	Time	time the device is to continue	2	4	
		operating after a fault is	3	8	
		detected or for the amount of time between attempts to	4	16	
		restart. The time unit is set in	5	32	
		register 0xC8.	6	64	
		1093101 0,000.	7	128	

MFR_IOUT_AVG_OC_FAULT_LIMIT (0xD0)

Description: Average output over current limit.

Bit	Description	Format	Unit
15:0	Average output over current fault limit.	Linear	Α

MFR_IOUT_OC_FAST_FAULT_LIMIT (0xD1)

Description: The MFR_IOUT_OC_FAST_FAULT_LIMIT command sets or retrieves lout fast overcurrent fault threshold, in Amperes.

Bit	Description	Format	Unit
15:0	Sets lout fast over-current fault threshold.	Integer	Α
		Unsigned	



MFR_IOUT_AVG_COEFF (0xD2)

Description: Coefficient for controlling the averaging strength for the averaged lout current limit.

Bit	Description	Format
5:0	Coefficient for controlling the averaging strength for the averaged lout current limit. Value 0-63. Setting the coefficient to 0 will disable the averaging and the average current limit behaviour.	Integer Unsigned

MFR_READ_EVENT (0xD7)

Description: Retrieves historical information from the snapshot function stored in OTP memory. The MFR_EVENT_INDEX command is used to retrieve the number of available snapshots and to set which snapshot should be available to read through this command.

Bit	Function	Description	Format	Unit
207:1	Ticks Low	The Lowest bytes of the event ticks.	Fixed	
76	Bytes		Point	
			Unsigned	
175:1	Ticks High	The highest byte of the event ticks.	Byte Array	
68	Byte			
95:80	Read Duty	Returns the actual duty cycle in percent.	Fixed	%
	Cycle		Point	
			Signed	
79:64	Read		Integer	°C
	Temperature		Signed	
	1			
63:48	Read lout	Returns the measured output current.	Fixed	Α
			Point	
			Signed	
47:32	Read Vout	Returns the measured output voltage.	Fixed	٧
			Point	
			Signed	
31:16	Read Vin	Returns the input voltage reading.	Fixed	٧
			Point	
			Signed	
15:0	Event ID	Event id < 2^16.	Integer	
			Unsigned	

Bit	Function	Description	Value	Function	Description
167:1	Old State	The old state bit field contains	0000	Idle	Idle.
64		the state of the module around	0001	Ton Delay	Ton Delay.
		4ms before the error occured.	0010	Ramp Up	Ramp Up.
		This is generally of higher	0011	Regulating	Regulating.
		interest than the error state.	0100	Toff Delay	Toff Delay.
			0101	Ramp Down	Ramp Down.
			0110	Fault	Fault.
163:1	Error State	The error state bit field contains	0000	Idle	Idle.
60		the state of the module when the error is detected, this will normally have the value FAULT unless a firmware fault occurs or the response setting is set to	0001	Ton Delay	Ton Delay.
			0010	Ramp Up	Ramp Up.
			0011	Regulating	Regulating.
			0100	Toff Delay	Toff Delay.
			0101	Ramp Down	Ramp Down.
		ignore fault.	0110	Fault	Fault.
159	Sync Fault	Sync fault.	0		No fault.
			1		Fault.
158		lout average overcurrent fault.	0		No fault.



Unsupported Command Received. Command Received. 1 Invalid Command Received. 150 Invalid Or Unsupported Data 0 No Invalid Data Received.	lout Aver		1	Fault.
Short Circuit Fault Faul		lout fast overcurrent fault	0	No fault
Protection Fault	Overcurre			
Protection Fault	56 Short Circ	uit Short circuit protection fault.	. 0	No fault.
Temperature 2 Protection Fault 154 Auxiliary Auxiliary voltage protection fault. 155 Auxiliary Voltage Protection fault. 156 Auxiliary Voltage Protection fault. 157 Fault. 158 Startup Over Current protection fault. 159 Over Current Protection Fault 150 Over temperature 2 protection Varning Protection Varning Command Received. 150 Invalid Or Unsupported Command Received. 150 Invalid Or Unsupported Data Received. 150 Invalid Or Unsupported Data Received. 160 Invalid Or Unsupported Data Received. 170 Invalid Or Unsupported Data Received. 180 Invalid Or Unsupported Data Received. 191 Packet Error Packet Error Check Failed. 192 Packet Error Packet Error Check Failed. 193 Memory Fault Detected. 194 Detected Data A communication fault other Communication Fault than the ones listed in this table in Saccured. 195 Other A communication fault other Communication on Fault Invalid Or Unsupported Pault. 195 Other A communication fault other Communication Or Fault. 196 Other A communication fault other Communication Or Fault. 197 Other A communication fault other Communication Or Fault. 198 Other A communication fault other Communication Or Fault. 198 Other A communication fault other Communication Or Fault. 199 Overtempera Vertemperature Verticus On No Fault. 199 Overtempera Overtemperature Warning. 190 Overtempera Overtemperature Warning. 190 Undertemper auture Fault. 190 Overtempera Undertemperature Warning. 190 Undertemper auture Fault. 190 Unde				Fault.
2 Protection Fault	55 Over	Over temperature 2 protect	ion 0	
154	2 Protect		1	Fault.
Voltage Protection Fault Fault. Fault. Fault.		Auxiliary voltage protection	0	No fault.
Current Protection Fault Fault Fault Fault Fault Fault	Voltage Protectio	fault.		Fault.
Current Protection Fault 152 Over Temperature 2 Protection warning. 153 Invalid Or Unsupported Command Received. 150 Invalid Or Unsupported Command Received. 150 Invalid Or Unsupported Data Received. 150 Invalid Or Unsupported Data Received. 149 Packet Error Check Failed. 148 Memory Fault Detected. 148 Memory Fault Detected. 149 Other Communicati on Fault. 145 Other Communicati on Fault has occurred. 146 Memory Or Unsupported Data Received. 147 Other Communicati on Fault has occurred. 148 Overtempera ture 2 protection warning. 149 Packet Error Check Failed. 140 Detected 141 Detected 142 Overtempera ture Fault 143 Overtempera ture Pault 144 Overtempera ture Pault 145 Overtempera ture Memory Or Logic Fault overtemperature Warning. 140 Undertemper ature Fault. 141 Undertemper ature Fault. 142 Overtempera ture Warning. 144 Undertemper ature Warning. 145 Undertemper ature Fault. 146 Overtempera ture Warning. 147 Undertemper ature Fault. 148 Overtempera ture Warning. 149 Packet Error Check Failed. 150 No Fault. 160 No Fault. 170 No Fault. 180 No Fault. 180 No Fault. 180 No Fault. 180 No Warning. 180 No Warning. 180 No Warning. 180 No Warning. 180 No Fault. 181 No Fault. 181 No Fault. 182 Overtempera ture Warning. 183 Vin Vin Overvoltage Fault. 184 No Fault. 185 Vin Vin Overvoltage Fault. 185 Vin Vin Overvoltage Fault. 185 Vin Vin Vin Vin Overvoltage Fault. 195 No Fault. 198 No Invalid Command. 199 No Invalid Command. 190 No Invalid Or Invalid Or Invalid Command. 190 No Invalid Data Received.	53 Startup C	ver Startup over current protect	ion 0	No fault.
152	Protectio	fault.		Fault.
Temperature 2 Protection Warning. 151 Invalid Or Unsupported Command Received. 152 Invalid Or Unsupported Command Received. 153 Invalid Or Unsupported Command Received. 154 Invalid Or Unsupported Command Received. 155 Invalid Or Unsupported Data Received. 156 Invalid Or Unsupported Data Received. 157 Invalid Or Unsupported Data Received. 158 Received Received. 159 Packet Error Check Failed. 160 Invalid Or Unsupported Data Received. 170 Invalid Or Unsupported Data Received. 180 Invalid Data Received. 181 Invalid Data Received. 181 Invalid Data Received. 182 Invalid Data Received. 183 Invalid Data Received. 184 Invalid Data Received. 185 Invalid Data Received. 186 Invalid Command Received. 187 Invalid Command Received. 187 Invalid Command Received. 187 Invalid Command Received. 188 Invalid Command Received. 188 Invalid Command Received. 189 Invalid Commanded. 189 Invalid Comund Received. 180 Invalid Comund Received. 180 Invalid Comund Received. 180 Invalid Comund Receive. 180 Invalid Comund Receive. 180 Invalid Comund Receive. 180 Invalid Comun		Over temperature 2 protect	ion 0	No fault.
Unsupported Command Received. 1	2 Protect	ture warning.		Fault.
Received Invalid Or Invalid Or Unsupported Data 0 No Invalid Data Received 1 Invalid Data Receive 1 Invalid Data Petal Pata		· · ·	0	No Invalid Command Received.
Unsupported Data Received. 149 Packet Error Check Failed. 148 Memory Fault Detected. 145 Other Communication fault other Communication on Fault has occurred. 144 Memory Or Logic Fault has occurred. 145 Overtempera ture Fault. 146 Overtempera ture Warning. 147 Overtemper ature Warning. 148 Overtemper ature Fault. 149 Detected Data Received. 10			1	Invalid Command Received.
Data Received Re			a 0	No Invalid Data Received.
Check Failed 1	Data		1	Invalid Data Received.
148Memory Fault DetectedMemory Fault Detected.0No Fault.145Other Communicati on FaultA communication fault other 	49 Packet Er	ror Packet Error Check Failed.	0	No Failure.
Detected 1 Fault. 145 Other Communication fault other Communication fault than the ones listed in this table on Fault has occurred. 144 Memory Or Other Memory Or Logic Fault has occurred. 145 Overtempera ture Fault ture Fault Overtemperature Fault. 146 Overtempera ture Warning. 147 Overtempera ture Warning. 148 Overtempera ture Warning. 149 Overtempera ture Warning. 140 Undertemper ature Warning. 140 Undertemper ature Warning. 150 Overtemperature Warning. 160 Overtemperature Warning. 170 Overtemperature Warning. 180 Overtemperature Warning. 190 Overtemper			1	
145 Other A communication fault other Communicati than the ones listed in this table 1 Fault. Fault.	,	· · · · · · · · · · · · · · · · · · ·		
Communicati on Fault has occurred. 144 Memory Or Logic Fault has occurred. 145 Overtempera ture Fault 147 Overtemperature Warning 148 Undertemper ature Warning 149 Undertemper ature Fault 140 Unde				
144Memory Or Logic Fault Logic Fault Has occurred.Other Memory Or Logic Fault has occurred.0No Fault.143Overtempera ture FaultOvertemperature Fault.0No Fault.142Overtempera ture WarningOvertemperature Warning.0No Warning.141Undertemper ature WarningUndertemperature Warning.0No Warning.140Undertemper ature FaultUndertemperature Fault.0No Fault.135VinVin Overvoltage Fault.0No Fault.	Commun	icati than the ones listed in this ta		
Logic Fault has occurred. 1 Fault. 143 Overtempera ture Fault. 1			lt 0	No Fault.
143Overtempera ture Fault0No Fault.142Overtempera ture Warning0No Warning.141Undertemper ature Warning0No Warning.141Undertemper ature Warning0No Warning.140Undertemper ature Warning0No Warning.140Undertemper ature Fault.0No Fault.135VinVin Overvoltage Fault.0No Fault.	,	, .	1	
142 Overtempera ture Warning 0 No Warning. 141 Undertemper ature Warning. 0 No Warning. 141 Undertemper ature Warning. 0 No Warning. 140 Undertemper ature Fault. 0 No Fault. 135 Vin Vin Overvoltage Fault. 0 No Fault. 10 No Fault. No Fault. 10 No Fault. 10 No Fault.		·		
ture Warning 1 Warning. 141 Undertemper ature Warning. 1 Undertemper ature Warning. 1 Warning. 1 Warning. 1 Warning. 1 Warning. 1 Warning. 1 Warning. 1 Warning. 1 Warning. 1 Fault. 1 So Vin Vin Overvoltage Fault. 1 No Fault. 1 No Fault.				
141 Undertemper ature Warning. 0 No Warning. 140 Undertemper ature Fault. 0 No Fault. 140 Undertemper ature Fault. 0 No Fault. 135 Vin Vin Overvoltage Fault. 0 No Fault. 1 No Fault. 1 No Fault. 1 No Fault.				
ature 1 Warning. 140 Undertemper ature Fault. 0 No Fault. ature Fault 1 Fault. 135 Vin Vin Overvoltage Fault. 0 No Fault.				
ature Fault 1 Fault. 135 Vin Vin Overvoltage Fault. 0 No Fault.	ature	,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,		
135 Vin Vin Overvoltage Fault. 0 No Fault.				
			·	
Fault	Overvolto		1	
134 VIN Overvoltage Warning. 0 No Warning.		VIN Overvoltage Warning	0	No Warning



	Vin		1	Warning.
	Overvoltage Warning			
133	Vin	Vin Undervoltage Warning.	0	No Warning.
	Undervoltage Warning		1	Warning.
132	Vin	Vin Undervoltage Fault.	0	No Fault.
	Undervoltage Fault		1	Fault.
131	Insufficient Vin	Asserted when either the input voltage has never exceeded	0	No Insufficient VIN encountered yet.
		the input turn-on threshold Vin- On, or if the unit did start, the input voltage decreased below the turn-off threshold.	1	Insufficient Unit is off.
127	lout	lout Overcurrent Fault.	0	No Fault.
	Overcurrent Fault		1	Fault.
126	lout	lout Overcurrent and low	0	No Fault.
	Overcurrent And Low Voltage Fault	voltage fault.	1	Fault.
125	lout Over	lout Overcurrent Warning.	0	No Warning.
	Current Warning		1	Warning.
124	lout	lout Undercurrent Fault.	0	No Fault.
	Undercurrent Fault		1	Fault.
119	Vout	Vout Overvoltage Fault.	0	No Fault.
	Overvoltage Fault		1	Fault.
118	Vout	Vout Overvoltage Warning.	0	No Warning.
	Overvoltage Warning		1	Warning.
117	Vout	Vout Undervoltage Warning.	0	No Warning.
	Undervoltage Warning		1	Warning.
116	Vout	Vout Undervoltage Fault.	0	No Fault.
	Undervoltage Fault		1	Fault.
115	Vout Max	Vout Max Warning (An attempt	0	No Warning.
	Warning	has been made to set the output voltage to value higher than allowed by the Vout Max command (Section 13.5).	1	Warning.
114	Ton Max Fault	Ton-Max Fault.	0	No Fault
113	Toff Max	Toff May Marning	0	Fault.
113	Warning	Toff Max Warning.	1	No Warning. Warning.
111	Vout	An output voltage fault or	0	No fault
•		warning has occurred.	1	Fault
110	lout/Pout	An output current or output	0	No Fault.
		power fault or warning has occurred.	1	Fault.
109	Input		0	No Fault.
_				



		An input voltage, input current, or input power fault or warning has occurred.	1	Fault.
108	Mfr Specific	A manufacturer specific fault or warning has occurred.	0	No Fault.
107	Power-Good	The Power-Good signal, if	0	No Fault.
102	Off	present, is negated. This bit is asserted if the unit is	0	Fault. No fault
		not providing power to the output, regardless of the reason, including simply not being enabled.	1	Fault
101	Vout	An output overvoltage fault	0	No Fault.
	Overvoltage has occurred.	1	Fault.	
100	lout	An output overcurrent fault has	0	No Fault.
	Overcurrent Fault	occurred.	1	Fault.
99	Vin	An input undervoltage fault has	0	No Fault.
	Undervoltage Fault	occurred.	1	Fault.
98	Temperature	A temperature fault or warning	0	No Fault.
		has occurred.	1	Fault.
97	Communicati	A communications, memory or	0	No fault.
	on/Logic	logic fault has occurred.	1	Fault.
96	None of the	A fault or warning not listed in	0	No fault.
	Above	bits [7:1] has occurred.	1	Fault.

MFR_READ_VAUX (0xDA)

Description: Returns the measured auxiliary input voltage.

Bit	Description	Format	Unit
15:0	Returns the auxiliary input voltage reading.	Linear	V

MFR_EVENT_INDEX (0xDB)

Description: When reading this command returns the number of events logged. When writing to this command it controls which event can be retrieved via the MFR_READ_EVENT command. Valid values when writing are the integers in the interval [0; count - 1].

Bit	Description	Format
15:0	Mfr. event index.	Integer Unsigned

MFR_SELECT_TEMPERATURE_SENSOR (0xDC)

Description: Select which temperature sensor, internal one or external remote temperature sensor, is used.

Bit	Function	Description	Value	Function	Description
4:3	Fault Source Select	Select which temperature sensor, internal one or external	00	Temp A	Temp A temperature sensor selected.
		remote temperature sensor, is used.	01	Temp B	Temp B temperature sensor selected.
			10	Temp I	Temp I temperature sensor selected.
2:0		READ_TEMPERATURE_1 READ_TEMPERATURE_2 Source Select.	000	TempA TempB	TempA (External Temperature sensor A) TempB (External Temperature sensor B).



READ_TEMPE RATURE_1 READ_TEMPE		001	TempA Templ	TempA (External Temperature sensor A) Templ (Internal Temperature sensor).
RATURE_2 Source Select		010	TempB TempA	TempB (External Temperature sensor B) TempA (External Temperature sensor A).
		011	TempB TempI	TempB (External Temperature sensor B) Templ (Internal Temperature sensor).
		100	Templ TempA	Templ (Internal Temperature sensor) TempA (External Temperature sensor A).
		101	Templ TempB	Templ (Internal Temperature sensor) TempB (External Temperature sensor B).

MFR_FLEX_FIRMWARE_CMD (0xE0)

Description: Mfr. firmware command.

Bit	Description	Format
63:0	Mfr. firmware command.	Byte Array

MFR_TEMP_COEFF (0xE7)

Description: Coefficient for lout temperature compensation.

Bit	Description	Format
15:0	Coefficient in Q16. lout compensation factor calculated according to: 1 / (1 +	Fixed Point
	t_coeff * (T - 20))	Unsigned

MFR_IOUT_APC (0xEA)

Description: The iout apc gain.

Bit	Description	Format	Unit
15:0	SSet the iout apc gain. the format is Linear 11, Exponent is -9 or -8 (User selection	Linear	Α
	possible). The LSB varies with isen_gain_mode - ISEN_LSB/Secondary current sense		
	resistor (Rsense).		

MFR_MULTI_PIN_CONFIG (0xF9)

Description: The MFR_MULTI_PIN_CONFIG command can be re-configured to enable or disable different functions and set the pin configuration.

Bit	Function	Description	Value	Function	Description
9	Enable	Enables the snapshot feature.	0		Disabled
	Snapshot	When enabled the snapshot	1		Enabled
	Feature	function will run once every ms			
		to collect telemetrydata and			
		regulator state into ring buffers			
		and to check for OVF, OCF or			
		OTF events.			
6:5	Sync Mode		00	Disabled	Sync Pin disabled.



		These bits configures the direction of the sync pin as either SYNC OUT or SYNC IN. Use the INTERLEAVE command to enable/disable the sync function and to configure phase offset.	01	Sync in	When the product is configured as SYNC IN it will synchronize its switching frequency to an external sync signal. The switching phases can be spread individually using the INTERLEAVE command 0x37.
			10	Sync out	When the product is configured as SYNC OUT it will send out a SYNC signal. Only 1 product in a group can be configured as SYNC OUT.
4	Sync Output	Selects the output type of the Sync pin.	0	Open Drain	Sync output configured as Open Drain.
			1	Push/Pull	Sync output configured as Push/Pull.
2	Power Good	This bit enables or disables	0	Disabled	
	Pull-down	Power Good pin pull-down.	1	Enabled	
1	Power Good Output	Two output options are available for Power Good	0	Push/Pull	Power Good configured Push/Pull.
		output, they are Push/Pull or Open Drain.	1	Open Drain	Power Good configured Open Drain.